


REPAIR PARTS

Sears Craftsman Convertible Edger Attachment - Model 944.511570

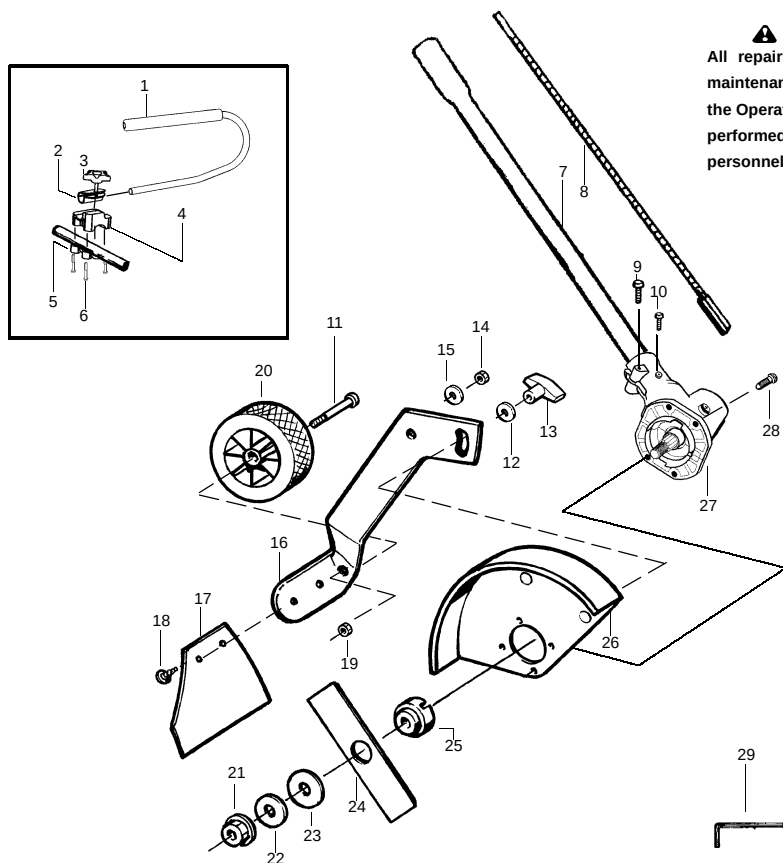

⚠ WARNING

All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.

Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530071502	Assy-Handlebar (incl. grip,cap,decal)	18.	530053012	Fastener-Mud Flap
2.	530095970	Clamp-Handlebar	19.	530015515	Locknut
3.	530016336	Knob	20.	530095125	Wheel
4.	530095971	Base-Clamp	21.	530015793	Nut-Flange
5.	530071684	Kit-Clamp-Tube (incl.#6)	22.	530016240	Washer-Belleville
6.	530015770	Screw	23.	530015792	Washer-Flat
7.	530071500	Assy.-Driveshaft	24.	71-85719	Blade
8.	530095883	Flexshaft-Split boom	25.	530054623	Dustcup
9.	530016014	Screw	26.	530071501	Kit-Edger Guard
10.	530016371	Screw-Alignment	27.	530071586	Assy-Gearbox
11.	530015981	Bolt-Shoulder Axle	28.	530016312	Screw
12.	530092062	Washer	29.	530031159	Wrench-Hex (5/32")
13.	530092059	Knob	Not Shown		
14.	530015515	Locknut		530163554	Manual
15.	530092062	Washer		530095894	Hanger-Attachment
16.	530053009	Bracket-Wheel		530055597	Decal-Shaft Warning
17.	530071251	Kit-Mud Flap (incl.#18)		530053138	Decal-Guard Warning