


REPAIR PARTS

same as 944.515580

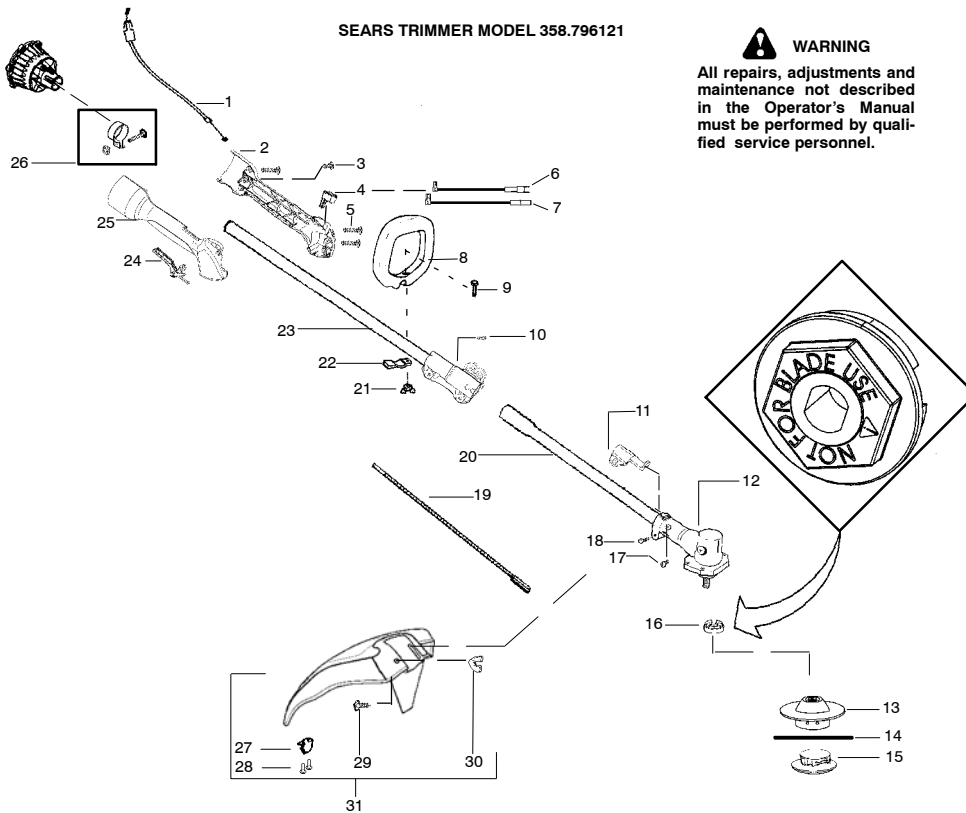

Ref.	Part No.	Description	Ref.	Part No.	Description
1.	530059488	Assy - Throttle Cable	21.	530016152	Wingnut
2.	530059484	Throttle hsg-left	22.	530088416	Clamp - Handle Assist
3.	530015934	Screw-shaft Alignment	23.	530071850	Kit- Upper Driveshaft w/flex (Incl. #10)
4.	530069572	Kit-Switch			
5.	530016179	Screw (4 Required)	24.	530055749	Trigger
6.	530059485	Leadwire-wire to switch	25.	530056023	Throttle hsg-right
7.	530059486	Leadwire-wire from switch	26.	530056883	Assy-Nose Cone Clamp
8.	530055699	Assy-Handle Assist (incl. 9,21,22)	27.	530052286	Limiters-Line
9.	530015820	Bolt	28.	530015805	Screw
10.	530016344	Screw	29.	530015820	Bolt
11.	530095812	Bracket - Shield	30.	530016152	Wingnut
12.	530096100	Assy-Gearbox(incl. 11,16-18)	31.	530071919	Kit-Shield Assy. (incl.27-30)
13.	71-85740	Accy.-Cutting Head			
14.	----	Tube - Line			
	71-85908	Red Line		Not Shown	
	71-85909	Black Line			
15.	530096039	Plate-Glide		530164990	Operator Manual
16.	530095814	Dustcup-Non Blade		530055350	Decal- Shaft Warning
17.	530016224	Screw		530055415	Decal-Upper Shaft Warning
18.	530016014	Screw		530056087	Decal-Start Instruction
19.	530096218	Shaft-Flex (lower)		530056341	Lock-Twist
20.	530071914	Assy-Lower Driveshaft		530059487	Sleeve-Wire

REPAIR PARTS


SEARS TRIMMER MODEL 358.796121

ENGINE PARTS




Note:

Cylinder and Internal Components are **NOT SERVICEABLE.**
Use Replacement Engine

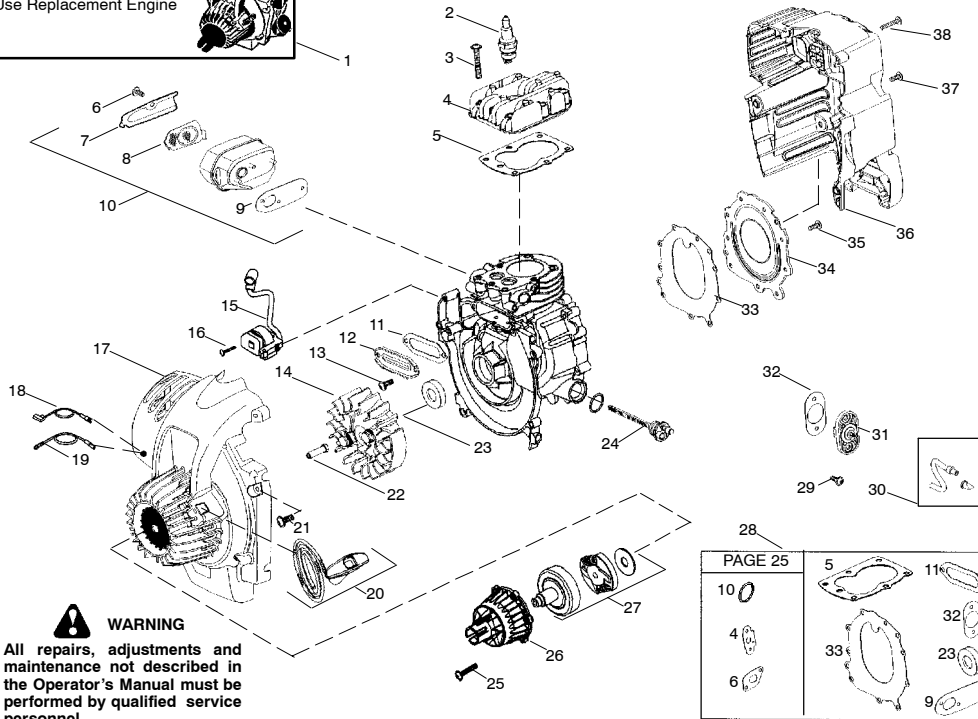

WARNING

All repairs, adjustments and maintenance not described in the Operator's Manual must be performed by qualified service personnel.


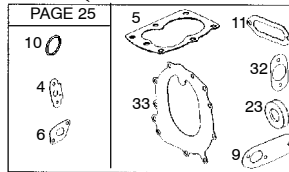


Ref.	Part No.	Description	Ref.	Part No.	Description	Part No.	Description
1.	021032 -0015	Replacement Engine	18.	699873	Assembly-Wire	Not Shown	
2.	696876	Spark Plug	19.	699874	Assembly-Wire		
3.	696891	Screw-Cyl. Head	20.	699944	Grip-Starter Rope(Incl. Rope)	275064	Manual- Owner's(B&S)
4.	696848	Head-Cylinder	21.	696889	Screw-Blower Hsg.	275072	Manual- Repair(B&S)
5.	696865	Gasket-Cyl. Head	22.	699870	Nut-Flywheel	699969	Cup-Oil Fill(B&S)
6.	697040	Screw-Muffler Defl.	23.	696879	Seal-Oil	697060	Label-Kit(B&S)
7.	697039	Deflector-Muffler (Incl. #6)	24.	696930	Dipstick (Incl. o-ring)	19538	Puller-Flywheel(B&S)
8.	697038	Arrestor-Spark	25.	696895	Screw (Starter Clutch)		
9.	697035	Gasket-Exhaust	26.	699888	Cover-Clutch		
10.	696874	Assy-Muffler (Incl. # 6-9)	27.	699871	Clutch-Starter		
11.	696931	Gasket-Breather	28.	697010	Kit-Engine Gasket Set		
12.	696849	Cover-Valve	29.	696889	Screw-Cam Gear Cover		
13.	696889	Screw-Valve Cover	30.	696871	Tube-Breather		
14.	696885	Assy-Flywheel	31.	696967	Cover-Cam Gear		
15.	699875	Armature-Magneto	32.	696929	Gasket-Cam Gear Cover		
16.	696892	Screw-Magneto	33.	696866	Gasket-Crankcase		
17.	699877	Blower Hsg./Rewind (Incl. 20)	34.	696950	Cover-Crankcase(Incl. 33)		
			35.	696889	Screw-Crankcase Cover		
			36.	696936	Shield-Cylinder		
			37.	696889	Screw-Cyl. Shield		
			38.	696895	Screw-Cyl. Shield(A)		

REPAIR PARTS

SEARS TRIMMER MODEL 358.796121

ENGINE PARTS

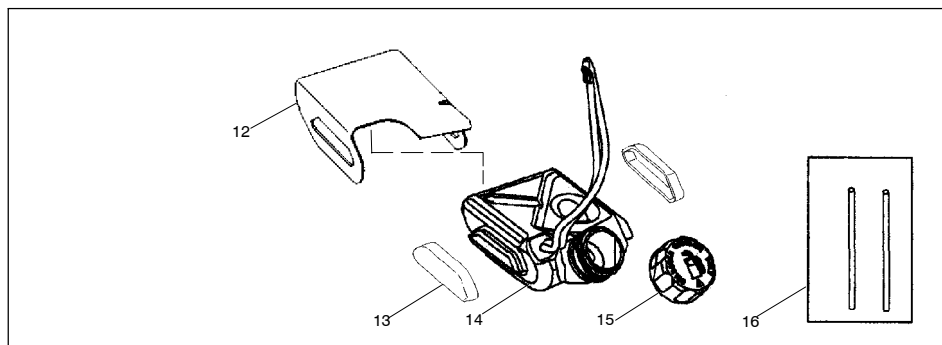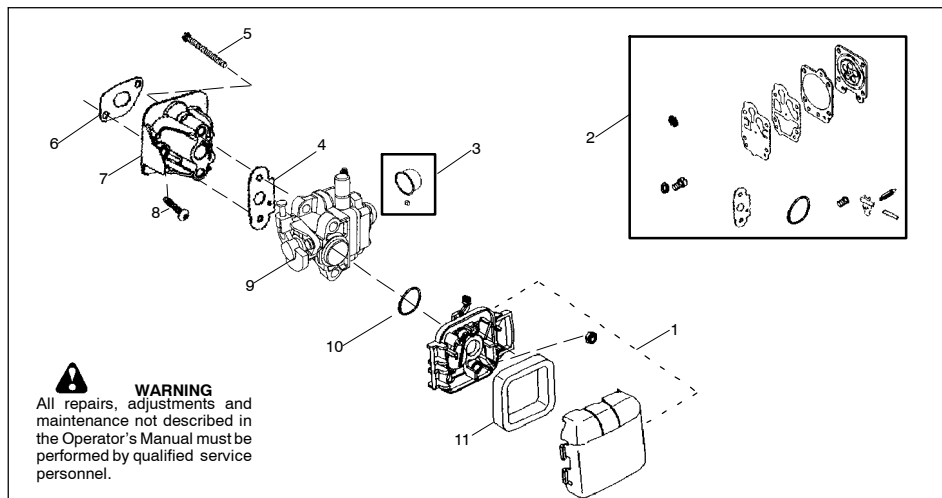

Ref.	Part No.	Description	Ref.	Part No.	Description
1.	696924	Cover-Air Cleaner	13.	696872	Insulator
2.	697008	Kit-Carburetor Overhaul	14.	696919	Assy-Fuel Tank (Incl. 12,13,15,16)
3.	696989	Primer-Carburetor	15.	696921	Cap-Fuel Tank
4.	696868	Gasket-Intake	16.	699876	Sleeve-Fuel Line
5.	696894	Screw-Carburetor			
6.	696867	Gasket-Intake			
7.	696870	Spacer-Carburetor			
8.	696893	Screw-Carburetor Adapter			
9.	696949	Carburetor			
10.	699942	Seal O-ring (Carburetor)			
11.	696923	Filter-Air Cleaner Foam			
12.	696922	Shield-Heat			