


SEARS

OWNER'S MANUAL

**MODEL NO.
944.526800**

Caution:
Read and follow
all Safety Rules
and Instructions
Before Operating
This Equipment

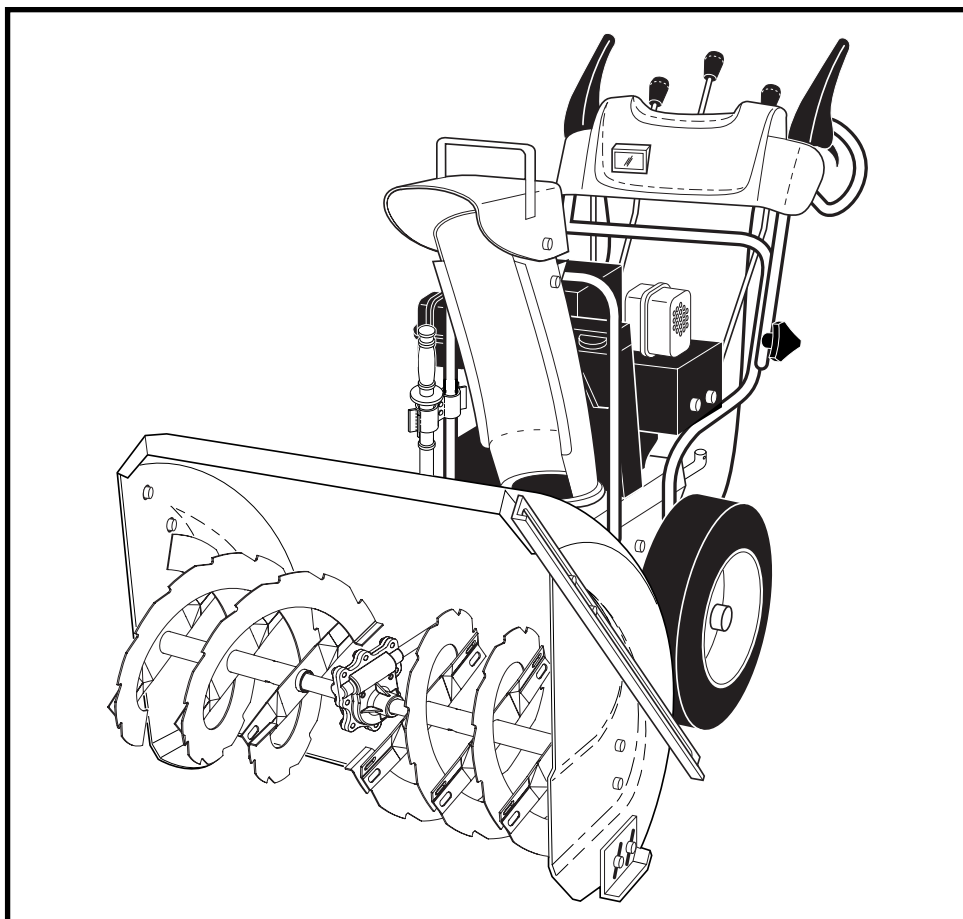

CRAFTSMAN®


13.0 HP 30" TWO-STAGE POWER-PROPELLED SNOW THROWER

- Assembly
- Operation
- Maintenance
- Service and Adjustments
- Repair Parts

REPAIR PARTS

SNOW THROWER - - MODEL NUMBER 944.526800

AUGER HOUSING / IMPELLER ASSEMBLY

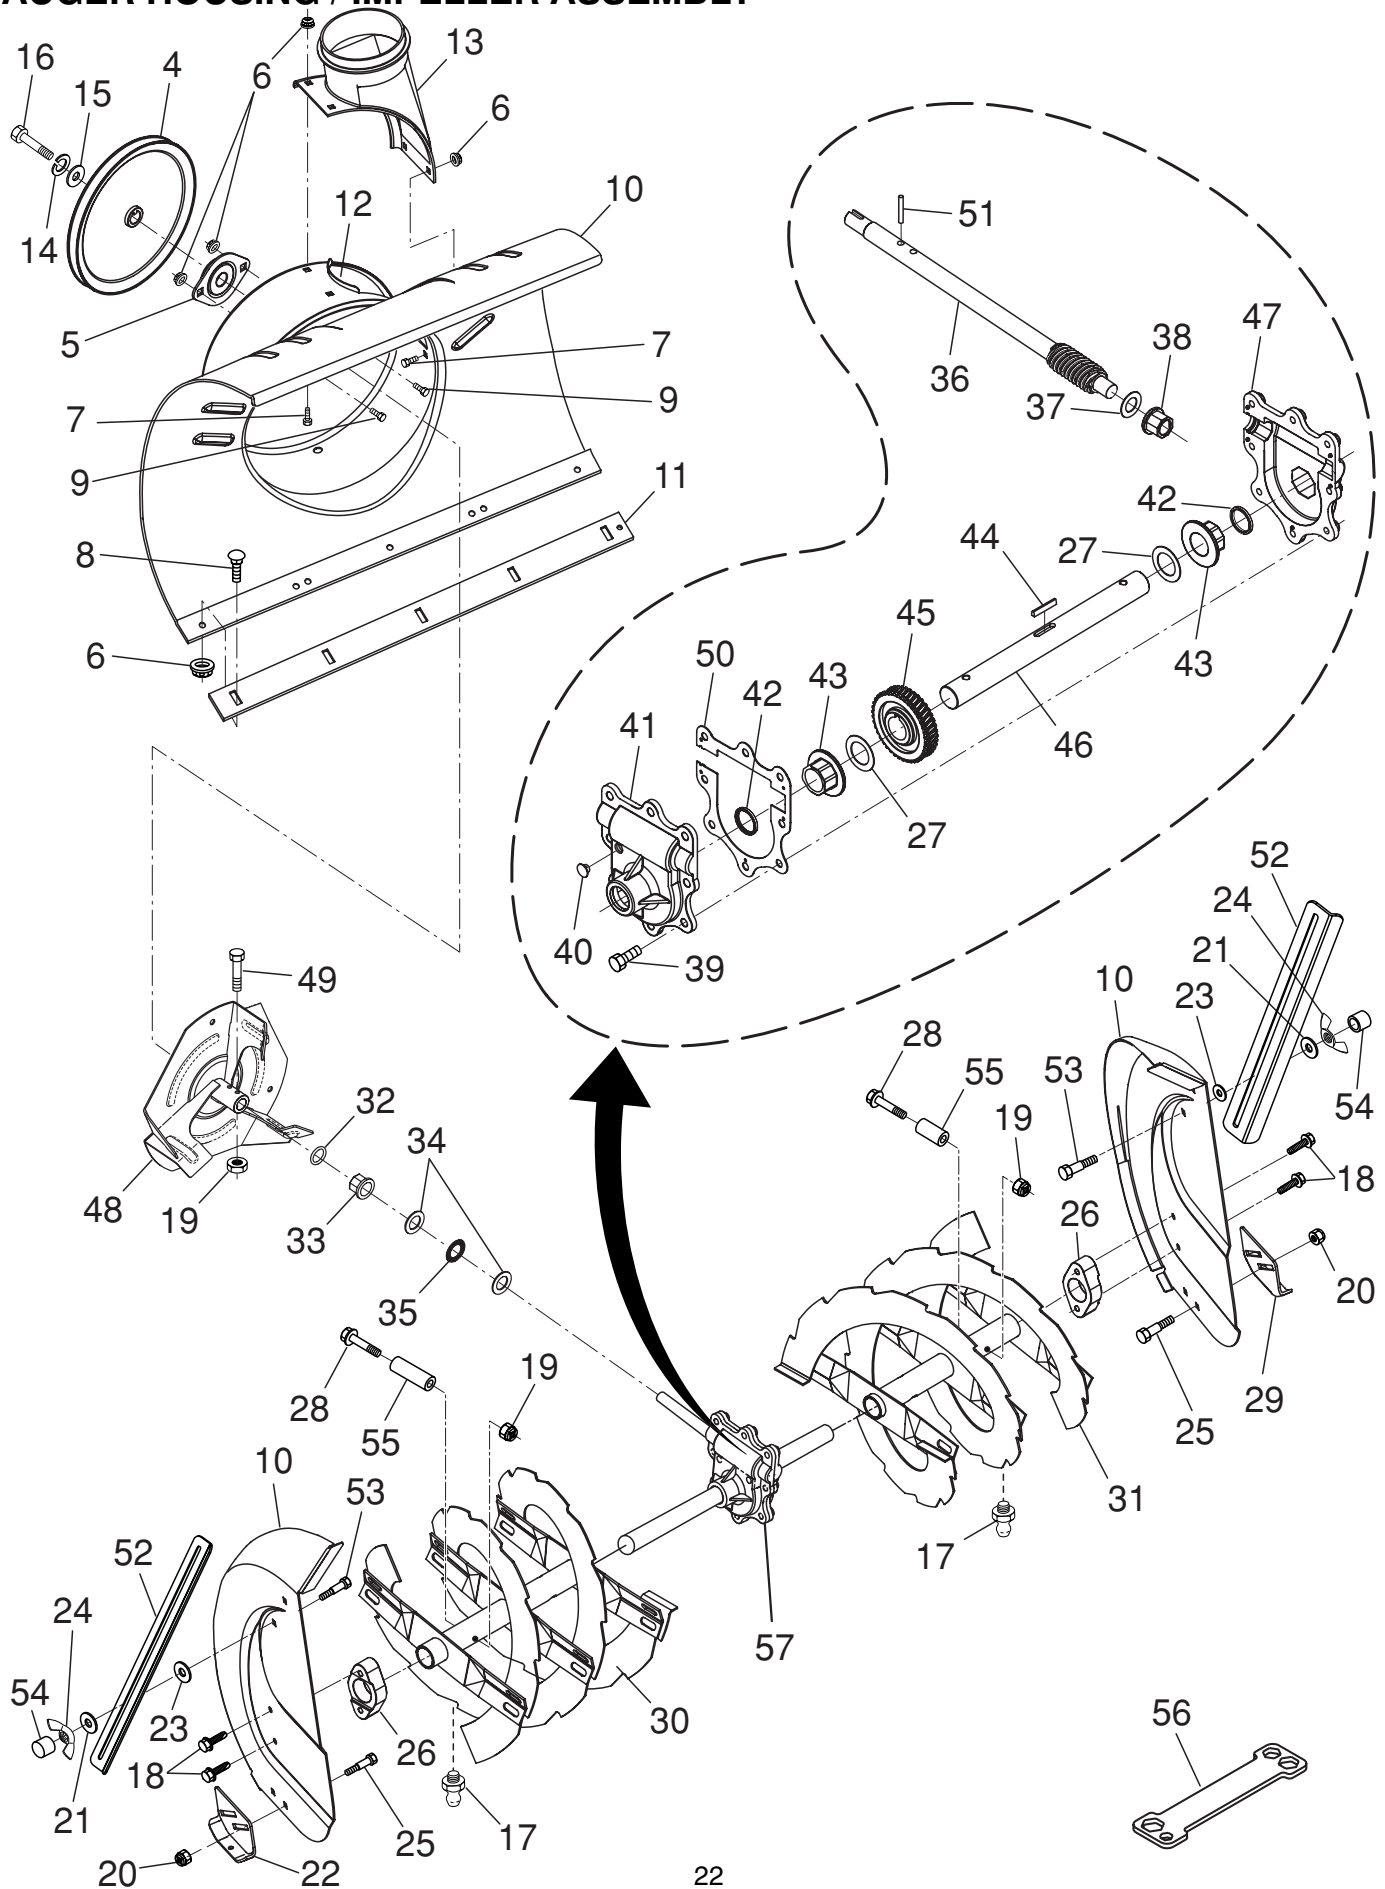

REPAIR PARTS**SNOW THROWER - - MODEL NUMBER 944.526800****AUGER HOUSING / IMPELLER ASSEMBLY**

KEY NO.	PART NO.	DESCRIPTION
4	191079	Pulley, Impeller
5	188909	Bearing Assembly, Flange
6	198541	Nut, Hex Flange 5/16-18
7	180355	Bolt, Flat Head, Carriage 5/16-18 x 5/8
8	72250505	Bolt, Carriage 5/16-18
9	199879	Bolt, Hex Head 5/16-18 x 5/8
10	404927X428	Housing, Auger
11	404933X479	Bar, Scraper
12	178675X008	Bracket, Corner Discharge
13	175322	Base, Discharge Chute
14	19111507	Washer, Flat
15	198552	Washer, Lock 5/16
16	74950512	Screw, Hex Head 5/16-18 x 3/4
17	405637	Fitting, Grease
18	179582	Screw, Hex Head 5/16 x 1
19	73800400	Nut, Hex Lock 1/4-20
20	198541	Nut, Hex Lock 5/16-18
21	401347	Washer, Flat 5/16
22	178777X479	Skid Plate, RH
23	179246	Washer, Nylon
24	72270506	Bolt, Carriage 5/16-18 x 3/4
25	128638	Wing Nut
26	174658	Bearing, Auger
27	174697	Washer, Thrust, 1"
28	192090	Bolt, Shear
29	174762X479	Skid Plate, LH
30	405973X479	Auger Assembly, RH
31	405972X479	Auger Assembly, LH
32	407768	O-Ring
33	407769	Bushing, Flange 3/4
34	174681	Washer, Thrust 3/4
35	174684	Bearing, Thrust 3/4
36	407757	Shaft, Impeller
37	174683	Washer, Thrust 5/8
38	407758	Bushing, Flange 5/8
39	407767	Screw, Hex Head 5/16-18 x 3/4
40	407760	Plug, Case
41	407761	Housing, Gearbox, RH
42	407770	Seal, Oil
43	407762	Bushing, Flange, 1"
44	189282	Key, Square 1/4 x 1/4 x 7/8
45	407763	Gear, Worm
46	407764	Shaft, Auger
47	407765	Housing, Gearbox, LH
48	175321X479	Impeller Assembly
49	74780426	Screw, Hex Head 1/4-20 x 1-5/8
50	407766	Gasket, Gearbox
51	7836M	Pin, Roll 3/16 x 1-1/8
52	405697X479	Bar, Drift Cutter
54	198709	Stop
55	188243	Kit, Shear (Contains 6 each of Key Numbers 19 and 28)
56	180684	Multi-Wrench
57	196710	Gearbox Assembly


NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm

IMPORTANT: Use only Original Equipment Manufacturer (O.E.M.) replacement parts.
Failure to do so could be hazardous, damage your unit and void your warranty.

REPAIR PARTS

SNOW THROWER - - MODEL NUMBER 944.526800

CONTROL PANEL / DISCHARGE CHUTE

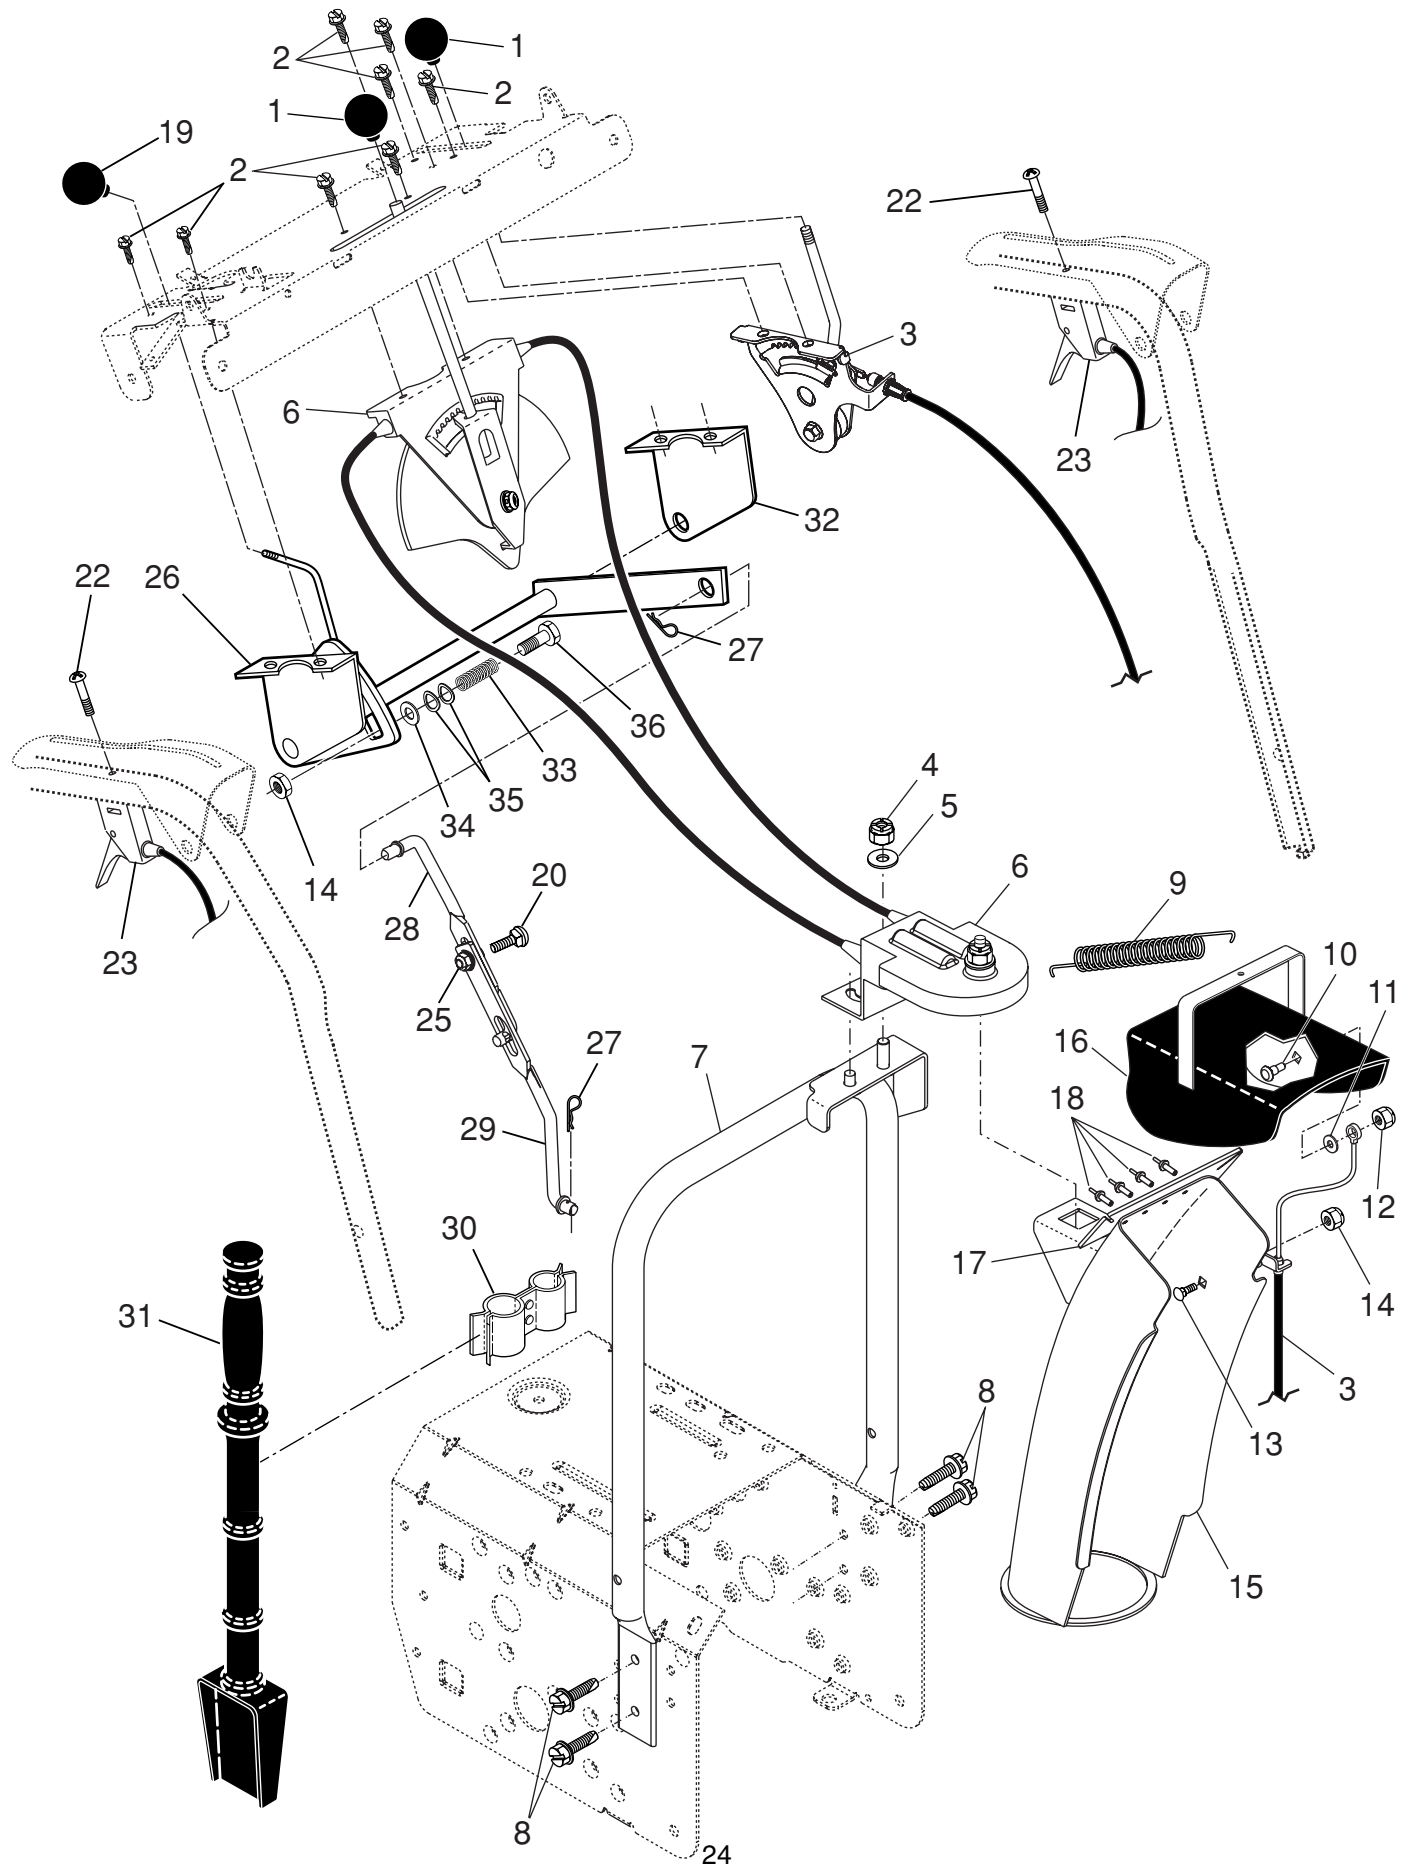

REPAIR PARTS**SNOW THROWER - - MODEL NUMBER 944.526800****CONTROL PANEL / DISCHARGE CHUTE**


KEY NO.	PART NO.	DESCRIPTION
1	183334	Knob, Lever, Black
2	17501010	Screw #10-24 x 5/8
3	198475	Control Assembly, Deflector
4	73800600	Nut, Lock 3/8-16
5	19131316	Washer, Flat 3/8
6	198473	Control Assembly, Chute Rotater
7	405784X479	Support, Pivot
8	150078	Screw, Hex Head 5/16-18 x 3/4
9	184505	Spring, Deflector
10	179829	Bolt, Shoulder
11	179246	Washer, Friction, Nylon
12	73800400	Nut, Lock 1/4-20
13	72250505	Bolt, Carriage 5/16-18
14	73800500	Nut, Lock 5/16-18
15	404770X428	Chute Assembly
16	178633X428	Deflector Assembly
17	179145	Seal, Deflector
18	128415	Rivet, Blind
19	183333	Knob, Speed Control Lever, Red
20	72270506	Bolt, Carriage 5/16-18 x 3/4
22	74041024	Screw #10-24 x 1-1/2
23	188303	Control Assembly, Power Steering
25	198541	Nut, Hex, Flangelock 5/16-18
26	192001	Lever Assembly, Speed Control
27	169675	Retainer, Hairpin
28	187782	Rod, Upper, Speed Control
29	187784	Rod, Lower, Speed Control
30	192710	Clamp, Mounting, Clean-Out Tool
31	192199	Tool, Clean-Out
32	192002	Bracket, Shift
33	192195	Spring
34	179246	Washer, Nylon
35	155415	Washer
36	74760552	Bolt, Hex Head 5/16-18 x 3-1/4

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm

IMPORTANT: Use only Original Equipment Manufacturer (O.E.M.) replacement parts.
Failure to do so could be hazardous, damage your unit and void your warranty.

REPAIR PARTS HANDLES

SNOW THROWER - - MODEL NUMBER 944.526800

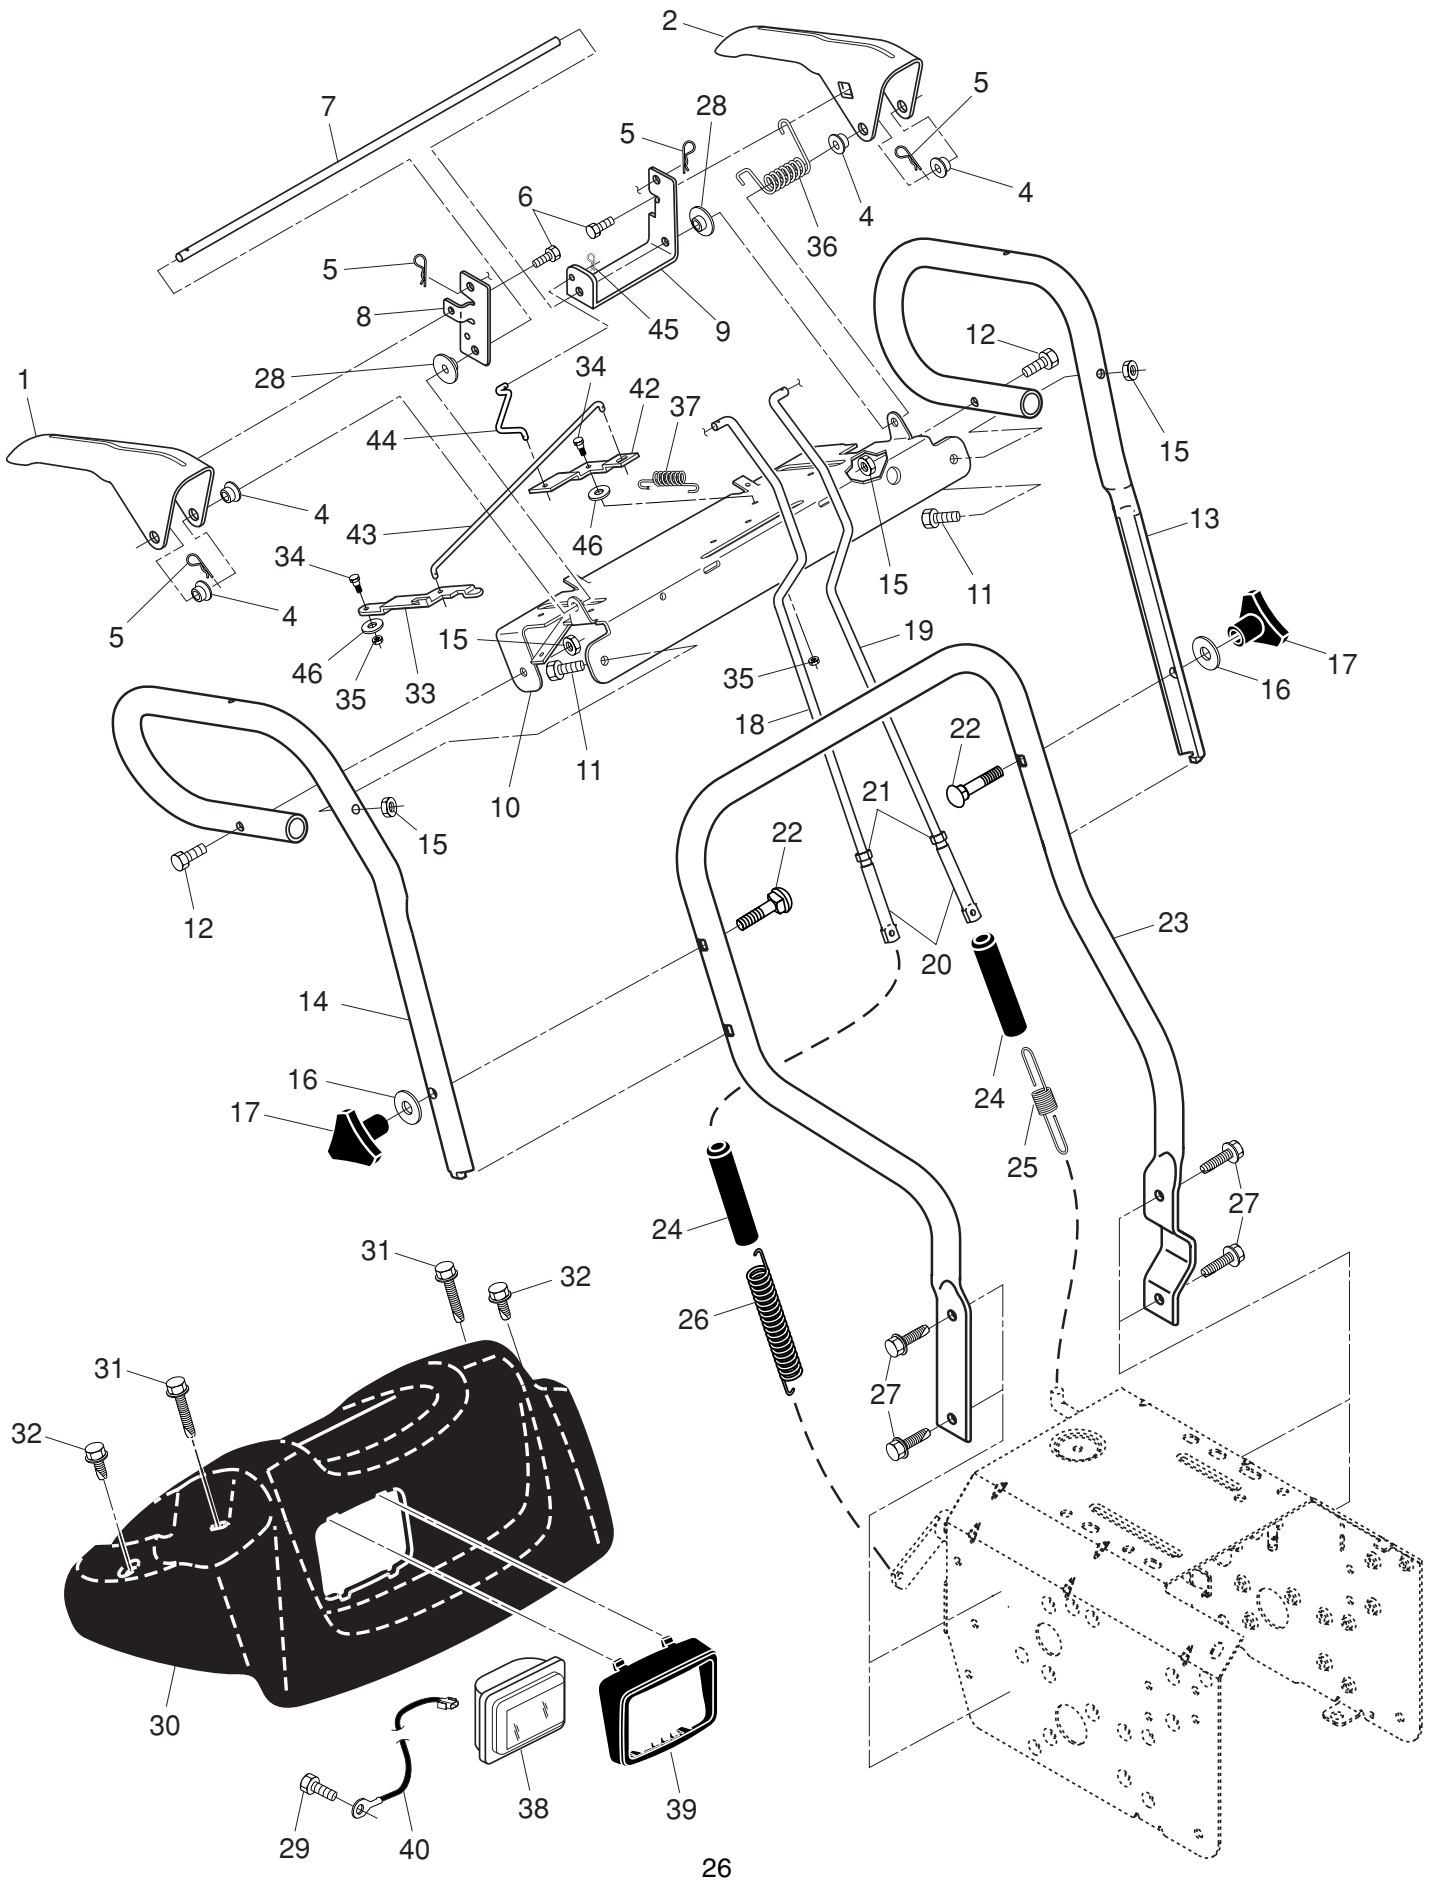

REPAIR PARTS HANDLES

SNOW THROWER - - MODEL NUMBER 944.526800


KEY NO.	PART NO.	DESCRIPTION
1	405999X479	Lever, Auger Control, RH
2	405783X479	Lever, Traction Drive Control, LH
4	178888	Bushing, Flange
5	169675	Retainer, Hairpin
6	17060408	Screw, Hex Head 1/4-20 x 3/4
7	178652	Rod, Interlock
8	196333X008	Arm, Impeller Rod
9	196334X008	Arm, Traction Rod
10	196619X479	Panel, Control
11	74780524	Screw, Hex Head 5/16-18 x 1-1/2
12	74780528	Screw, Hex Head 5/16-18 x 1-3/4
13	407856X479	Handle Tube, LH
14	407857X479	Handle Tube, RH
15	751153	Nut, Lock 5/16-18
16	19131316	Washer, Flat 3/8
17	178899	Knob, Handle
18	193433	Rod, Auger Control
19	179098	Rod, Traction Control
20	180428	End, Control Rod
21	73350500	Nut, Hex, Jam 5/16-18
22	72120618	Bolt, Carriage 3/8-16 x 2-1/4
23	178643X479	Handle Tube, Lower
24	180447	Sleeve, Spring
25	180926	Spring, Traction Drive
26	178669	Spring, Auger Control
27	17000616	Screw, Hex Head 3/8-16 x 1
28	198559	Bushing, Pivot
29	193072	Screw, Headlight Ground Wire to Blower Housing
30	182906	Console, Panel
31	175262	Screw, Hex Head, Tapping #10-24 x 1-1/4
32	184471	Screw, Hex Head, Tapping #10-24 x 1/2
33	196335X008	Latch, Interlock
34	183518	Bolt, Shoulder
35	68038	Nut, Lock 1/4-20
36	178831	Spring, Torsion, Lever
37	193885	Spring, Interlock
38	178666	Headlight, Halogen (Includes Bulb)
- -	401620	Bulb, Halogen
39	178668	Bezel, Headlight
40	180964	Harness, Headlight (Halogen)
42	196336X008	Lever, Interlock
43	199638	Rod, Latch, Interlock
44	196338	Rod, Arm, Interlock
45	700279	Clip
46	57079	Washer, Hardened

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm
IMPORTANT: Use only Original Equipment Manufacturer (O.E.M.) replacement parts.
 Failure to do so could be hazardous, damage your unit and void your warranty.

REPAIR PARTS

SNOW THROWER - - MODEL NUMBER 944.526800

DRIVE

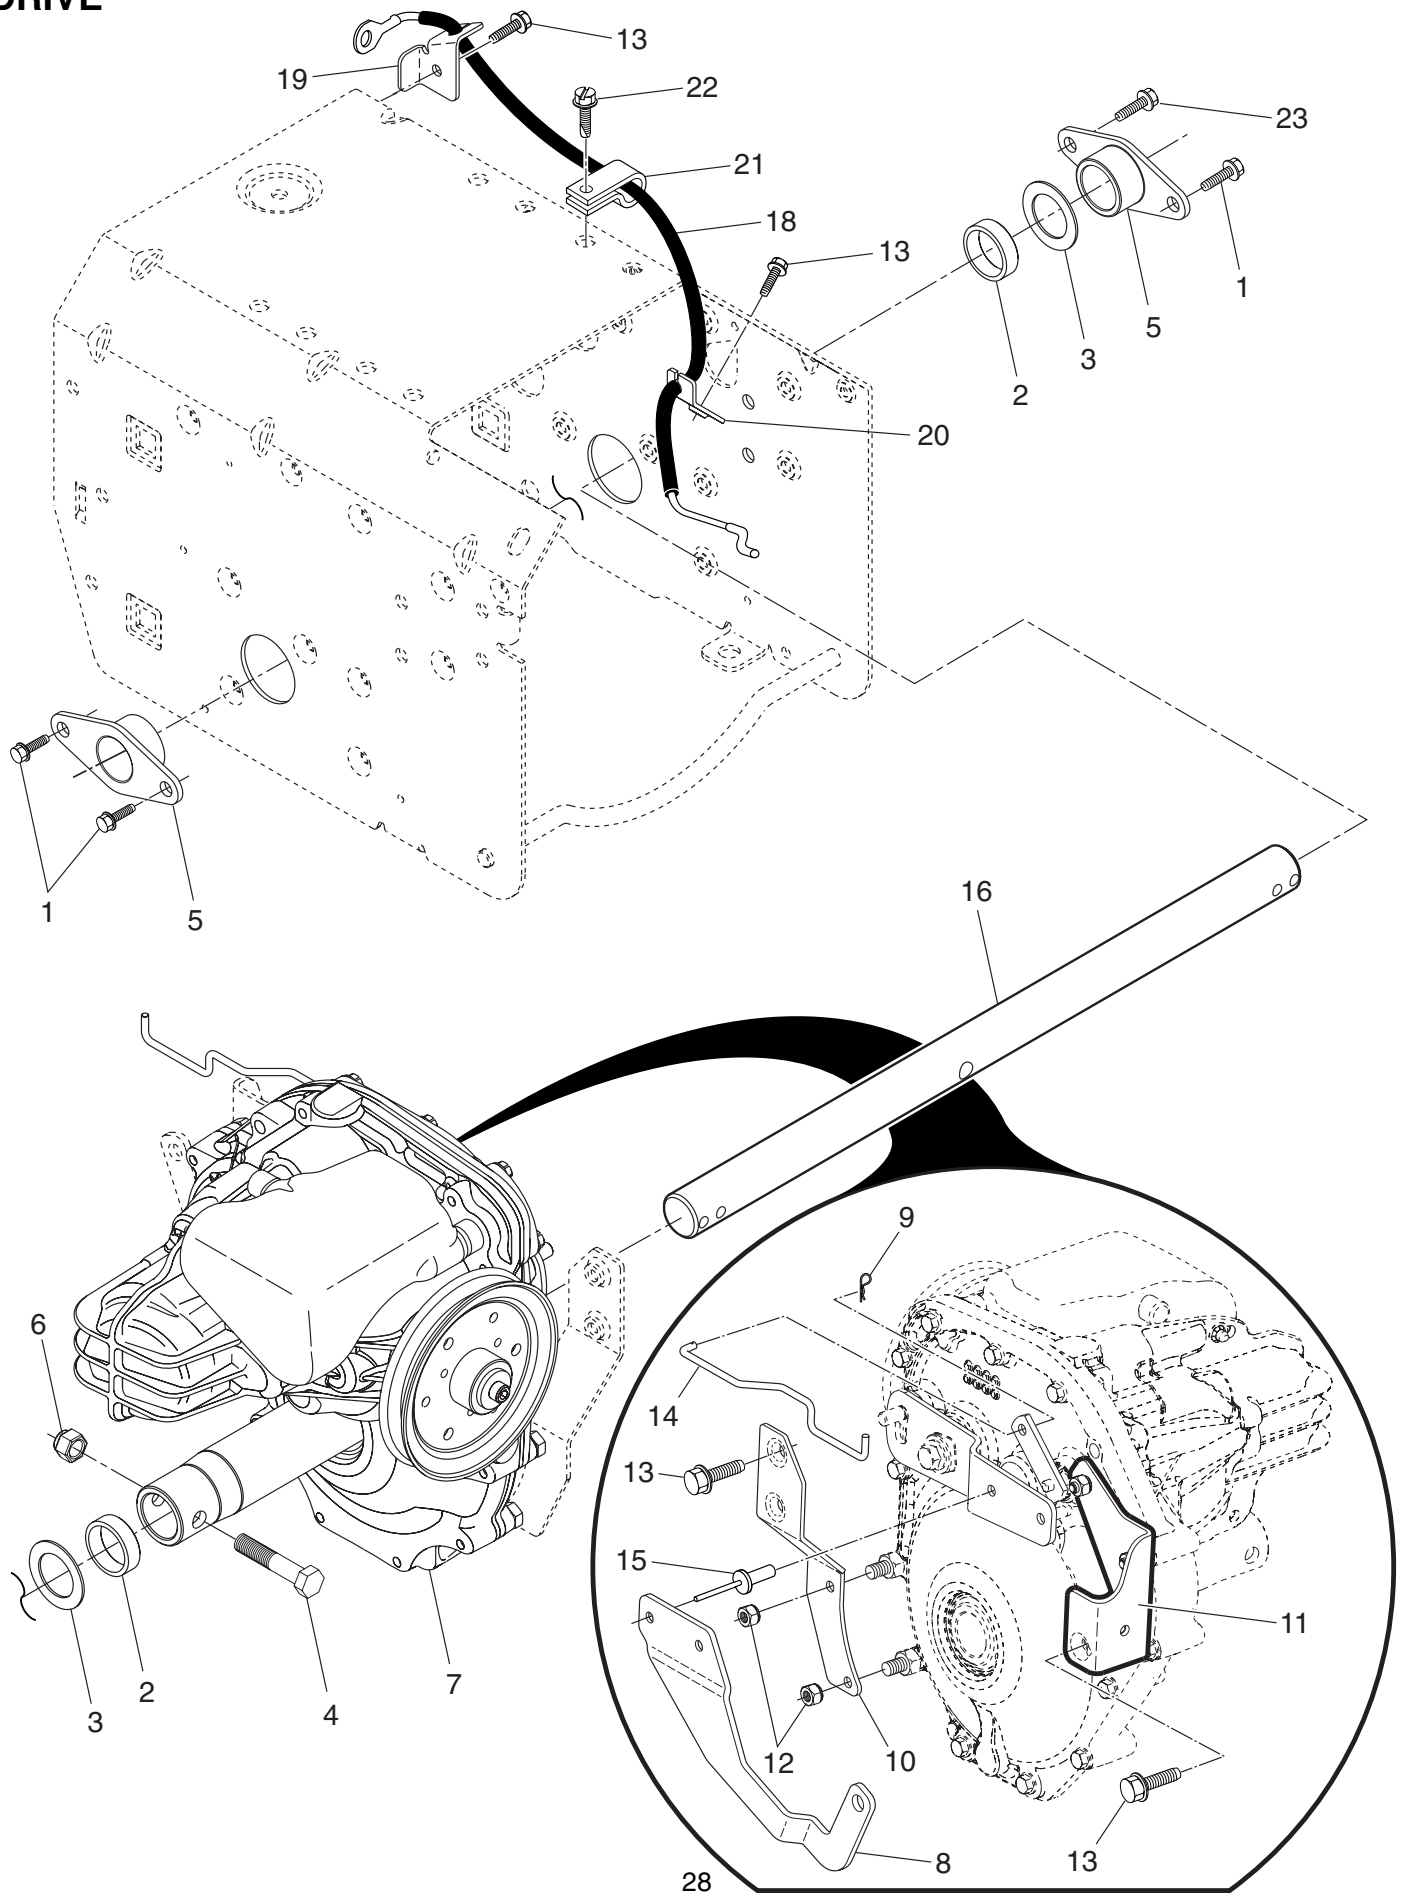

REPAIR PARTS DRIVE

SNOW THROWER - - MODEL NUMBER 944.526800

KEY NO.	PART NO.	DESCRIPTION
1	198584	Screw 1/4-20 x 1/2
2	187794	Spacer, Axle
3	174697	Washer, Thrust
4	74780632	Screw, Cap, Hex Head 3/8-16 x 2
5	179830	Bearing, Axle
6	73930600	Nut, Hex, Centerlock 3/8-16
7	187776	Transmission Assembly
8	187787	Speed Control Arm, Hydro
9	700279	Retainer Clip
10	188101	Torque Strap
11	193255X479	Bracket, Anti-Rotate
12	73800400	Nut, Hex, Nylock 1/4-20
13	150078	Screw, Hex Washer Head 5/16-18 x 3/4
14	193256	Rod, Bypass Valve
15	191995	Pop Rivet
16	404308	Shaft, Axle
18	198466	Cable, Drive Control
19	192000	Bracket, Cable, Rear
20	191993	Bracket, Cable, Front
21	87930	Clip, Cable
22	17391208	Screw, Slotted Hex Head 1/8 x 1/2
23	146315	Screw, Hex Head 5/16-18 x 3/4


NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm

IMPORTANT: Use only Original Equipment Manufacturer (O.E.M.) replacement parts.
Failure to do so could be hazardous, damage your unit and void your warranty.

REPAIR PARTS

SNOW THROWER - - MODEL NUMBER 944.526800

CHASSIS / ENGINE / PULLEYS

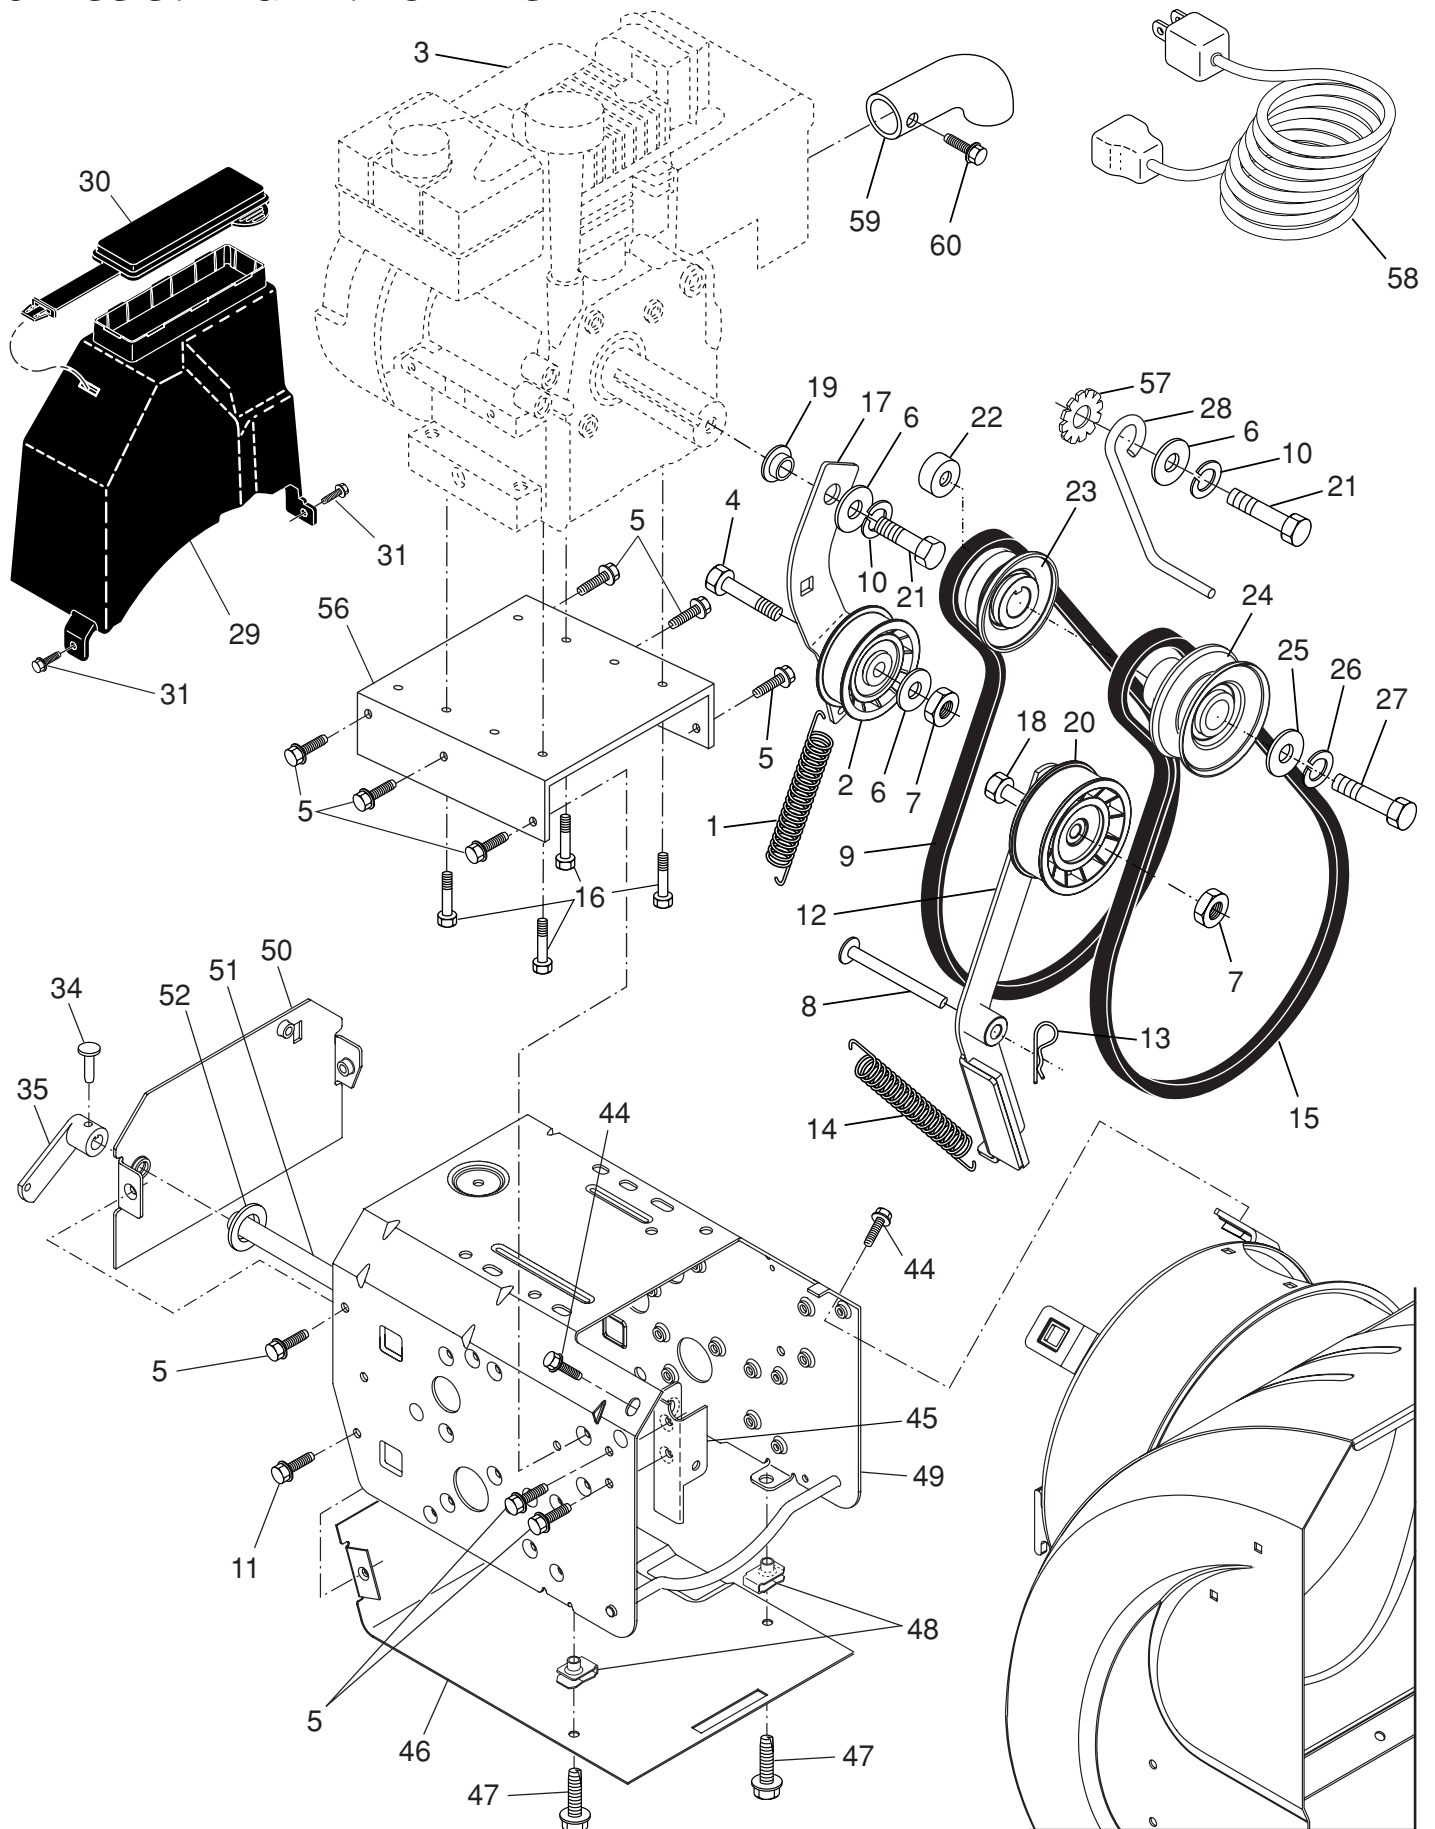

REPAIR PARTS**SNOW THROWER - - MODEL NUMBER 944.526800****CHASSIS / ENGINE / PULLEYS**


KEY NO.	PART NO.	DESCRIPTION
1	192873	Spring, Traction Idler
2	180522	Pulley, Idler (2-1/4)
3	- - -	Engine, Briggs & Stratton, Model Number 21B414-0739-E1 (See Breakdown)
4	74780520	Screw, Hex Head 5/16-18 x 1-1/4
5	150078	Screw, Hex Washer Head 5/16-18 x 3/4
6	59289	Washer, Flat
7	73930500	Nut, Jam, Lock 5/16-18
8	175330	Pin, Idler Pivot
9	192383	V-Belt, Traction Drive
10	198552	Washer, Lock 5/16
11	198584	Bolt, Hex Head, Threaded, Rolled 5/16-18 x 1/2
12	179259	Impeller Idler Arm
13	85179	Retainer, Hairpin
14	178828	Spring, Brake
15	184496	V-Belt, Impeller Drive
16	150406	Screw, Hex Head 3/8-16 x 1-1/4
17	187786	Arm, Idler
18	74780524	Screw, Hex Head 5/16-18 x 1-1/2
19	198559	Bushing, Idler Pivot
20	180523	Pulley, Idler (2-3/4)
21	74610516	Screw, Hex Head 5/16-18 x 1
22	179371	Spacer, Engine Pulley
23	180478	Pulley, Engine, Traction Drive
24	179157	Pulley, Engine, Impeller Drive
25	400026	Washer, Flat 3/8
26	850263	Washer, Lock 3/8
27	851084	Screw, Hex Head 3/8-24 x 1-3/8
28	193607	Guide, Belt
29	192213	Belt Cover Assembly (Includes Toolbox Cover)
30	178830	Cover, Toolbox
31	405024	Screw, Hex Head 1/4-20 x 1/2
34	198580	Clevis Pin
35	405484	Arm, Auger Control
44	71210616	Screw, Hex Head
45	193397X479	Bracket, Pivot, Idler
46	187785X479	Pan, Frame Bottom
47	71020512	Screw, Hex Head 5/16-18 x 3/4
48	181156	Nut, Speed 5/16-18
49	404429X428	Frame Assembly
50	192115X428	Plate, Frame End
51	406109	Shaft, Auger Control
52	57079	Washer, Hardened
56	183537X479	Mounting Plate, Engine
57	11050500	Washer, Lock, External Tooth 5/16
58	198563	Power Cord
59	199725	Deflector, Muffler
60	199726	Screw

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm

IMPORTANT: Use only Original Equipment Manufacturer (O.E.M.) replacement parts.
Failure to do so could be hazardous, damage your unit and void your warranty.

REPAIR PARTS
WHEELS

SNOW THROWER - - MODEL NUMBER 944.526800

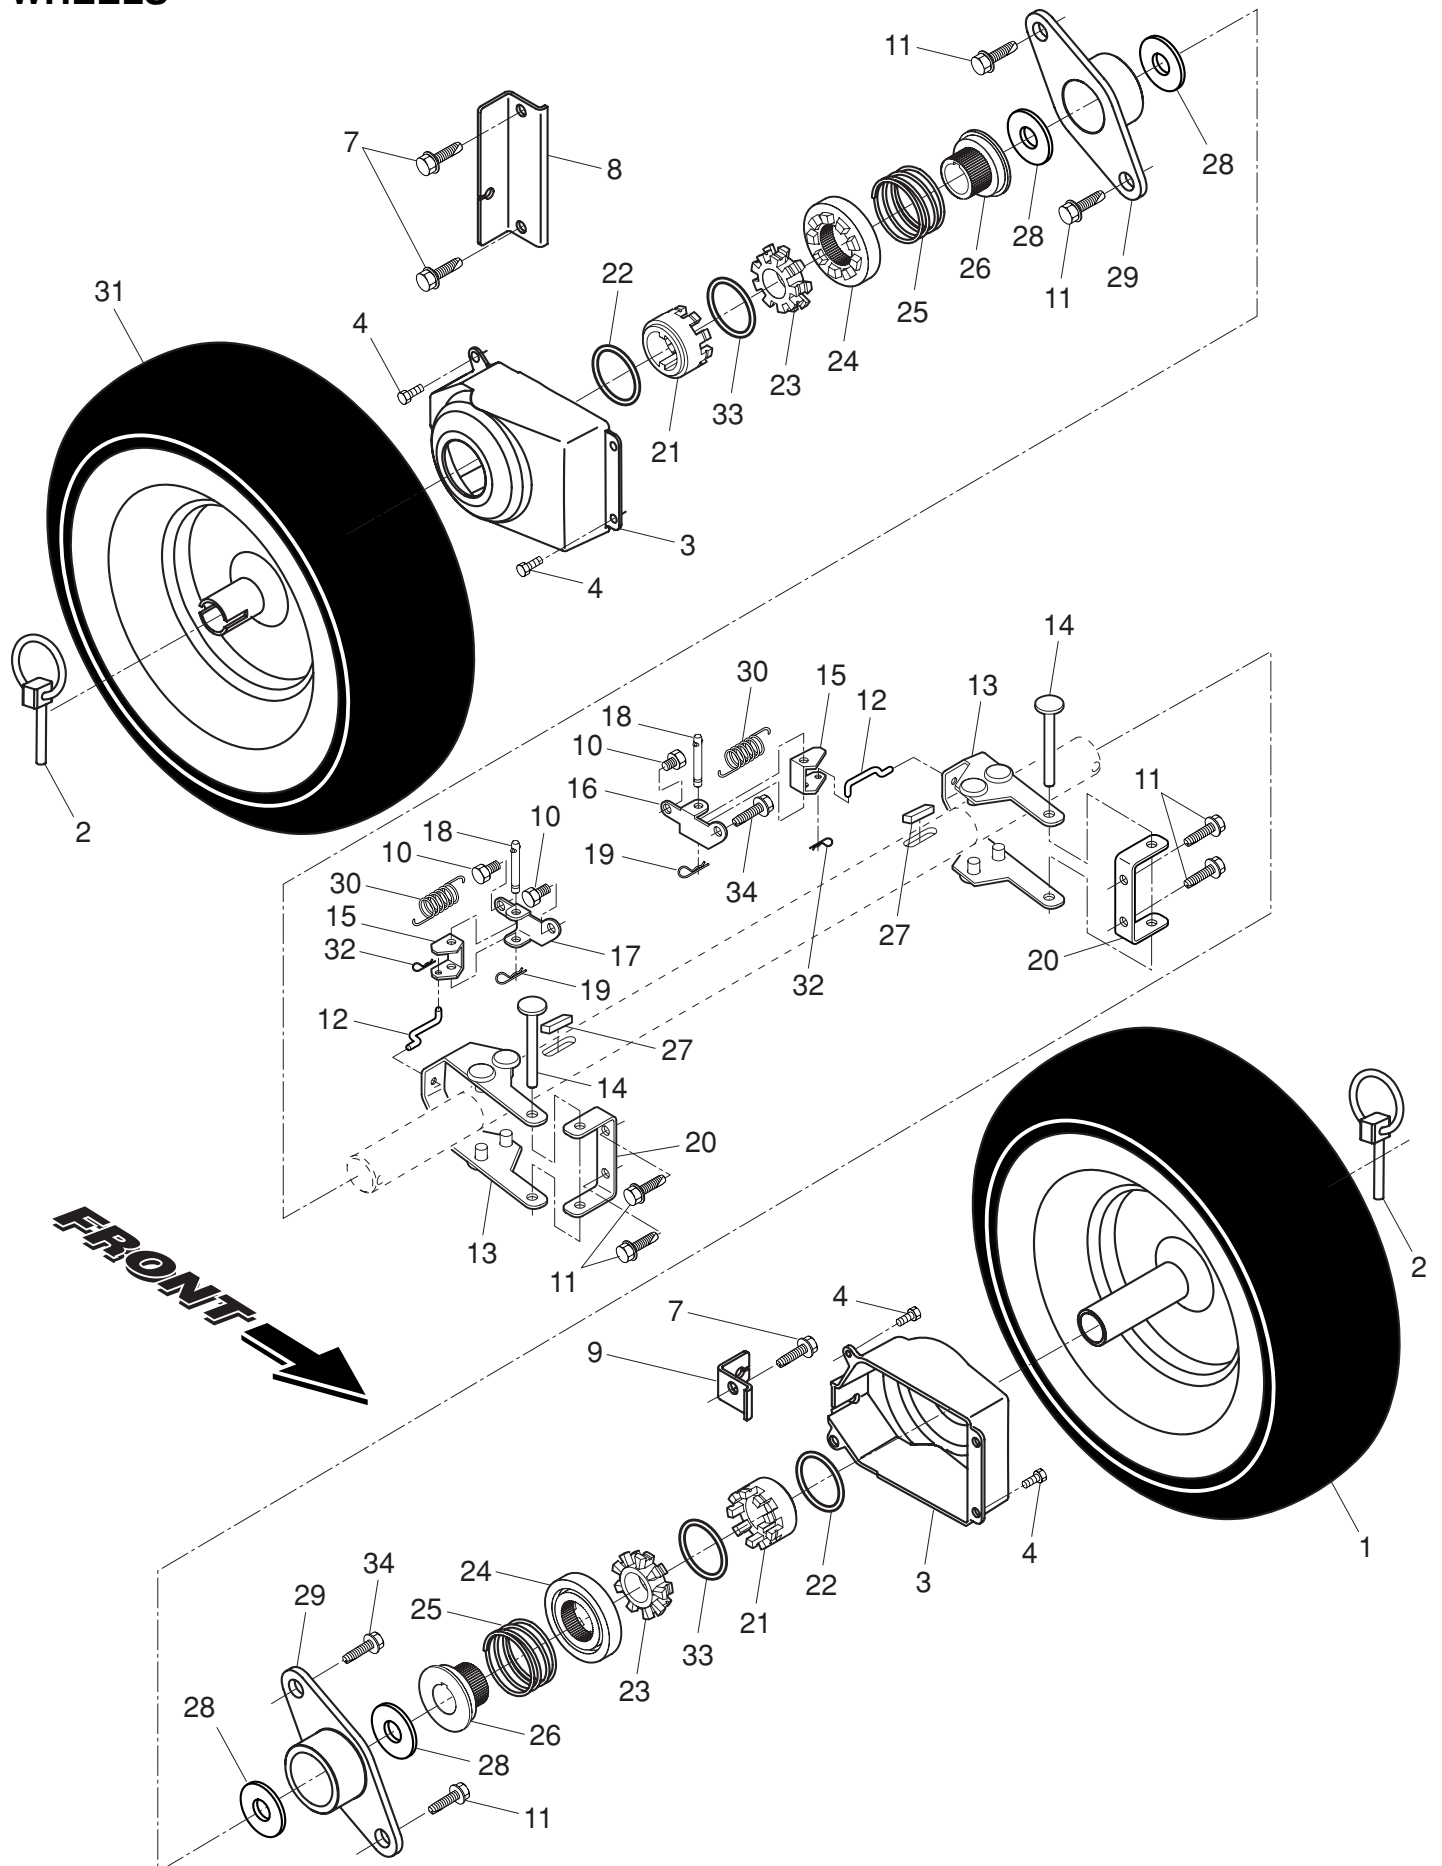

REPAIR PARTS

WHEELS


SNOW THROWER - - MODEL NUMBER 944.526800

KEY NO.	PART NO.	DESCRIPTION
1	196752X417	Wheel Assembly, 16", with Power Steering, LH
2	155443	Pin, Klik 1/4
3	405161	Cover, Power Steering
4	184471	Screw, Shoulder, Hex Head #10-24 x 1/2
7	17000616	Screw, Hex Head 3/8-16 x 1
8	185603X479	Bracket, Steering Cable, RH
9	185602X479	Bracket, Steering Cable, LH
10	17600406	Screw, Cap, Hex Head 5/16-18 x 3/4
11	198584	Screw, Hex Head 5/16-18 x 1/2
12	406057	Link, Steering Lever
13	193506X498	Lever Assembly, Steering
14	182015	Pin, Steering Lever
15	194944X008	Bellcrank
16	194939X008	Bracket Assembly, LH Steering
17	194943X008	Bracket Assembly, RH Steering
18	181847	Pin, Steering Bellcrank
19	85179	Retainer, Hairpin
20	179148X479	Bracket, Lever Assembly
21	192126	Driver, Wheel
22	182466	Ring, Wire Retainer
23	187622	Lobe, Wheel
24	194941	Slide, Clutch
25	179139	Spring, Clutch Slide
26	194940	Lobe, Axle
27	189282	Key, Square 1/4 x 1/4 x 7/8
28	174697	Washer, Thrust (1")
29	179830	Bearing, Axle
30	193885	Spring, Return, Steering Latch
31	196753X417	Wheel Assembly, 16", with Power Steering, RH
32	700279	Clip, Retainer
33	12000045	Ring, Retaining
34	150078	Screw, Tapping, Hex Head 5/16-18 x 3/4

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm
IMPORTANT: Use only Original Equipment Manufacturer (O.E.M.) replacement parts.
 Failure to do so could be hazardous, damage your unit and void your warranty.

**REPAIR PARTS
DECALS**
















SNOW THROWER - - MODEL NUMBER 944.526800

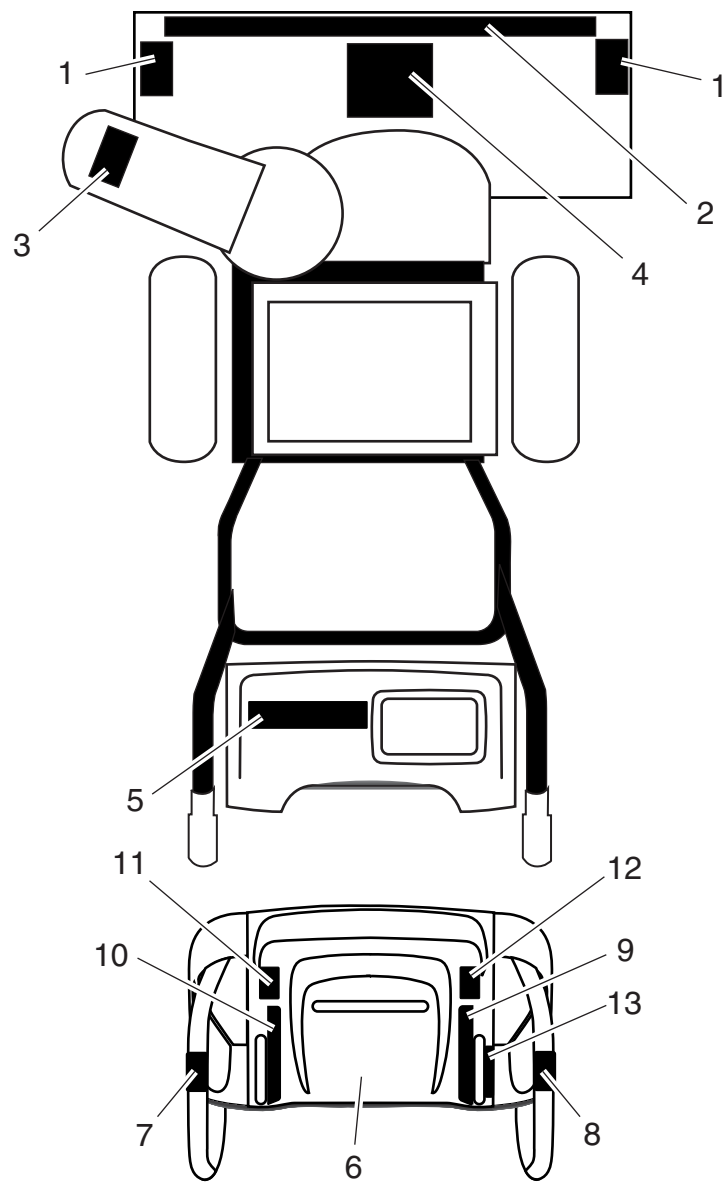



KEY NO.	PART NO.	DESCRIPTION
1	181037	Decal, Danger
2	407561	Decal, Craftsman, 13 HP / 30"
3	181035	Decal, Danger, Deflector
4	181042	Decal, Danger
5	183876	Decal, Craftsman
6	181033	Decal, Instruction
7	155798	Decal, Traction Lever
8	155800	Decal, Auger Lever
9	181039	Decal, Speed Control
10	183730	Decal, Remote Deflector
11	183907	Decal, LH Trigger
12	183905	Decal, RH Trigger
13	193460	Decal, Console, Hydro
--	406705	Owner's Manual, English
--	406759	Owner's Manual, French

NOTE: All component dimensions given in U.S. inches. 1 inch = 25.4 mm
IMPORTANT: Use only Original Equipment Manufacturer (O.E.M.) replacement parts.
Failure to do so could be hazardous, damage your unit and void your warranty.

- 48 SHORT BLOCK
- 1329 REPLACEMENT ENGINE
- 1058 OPERATOR'S MANUAL
- 1330 REPAIR MANUAL

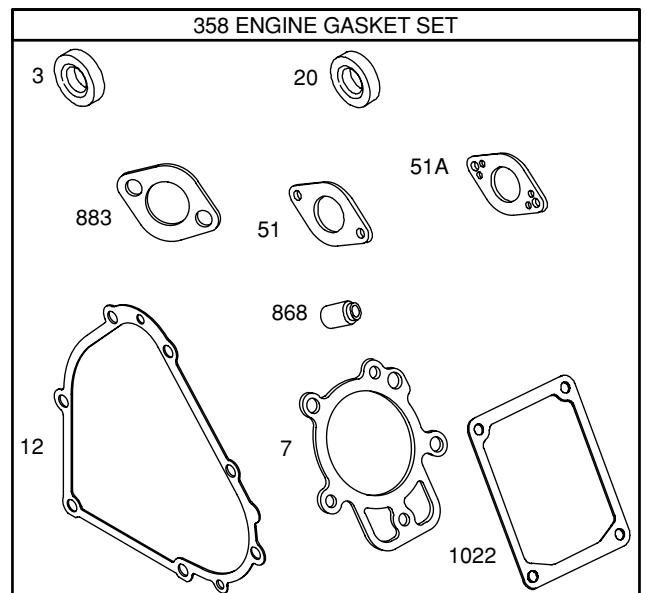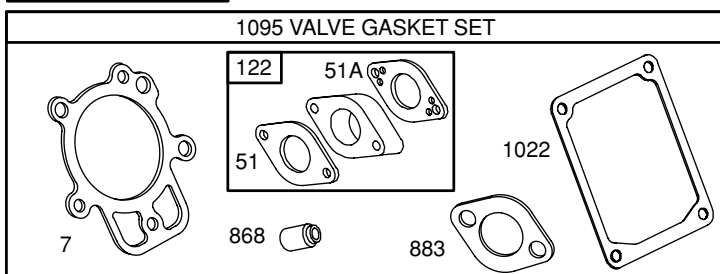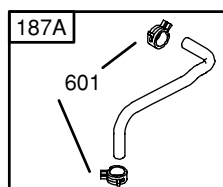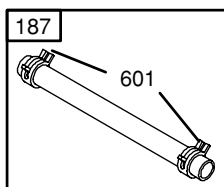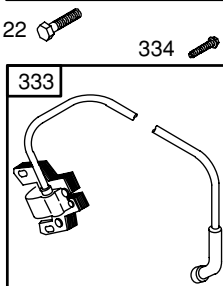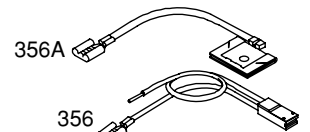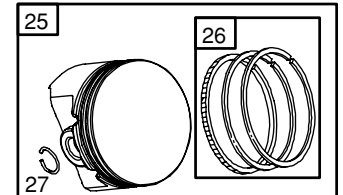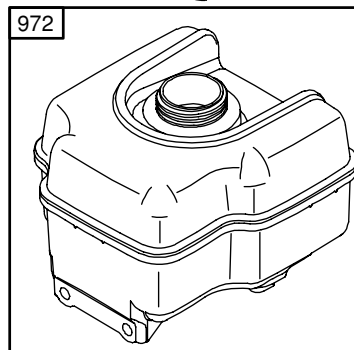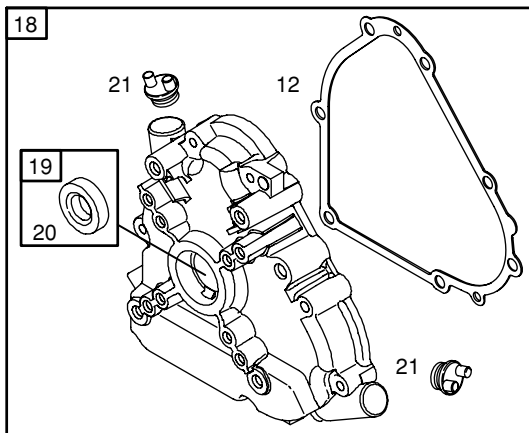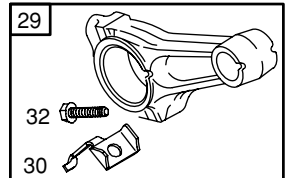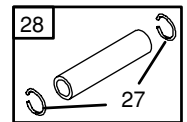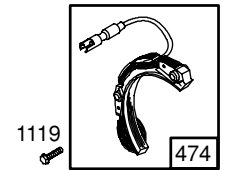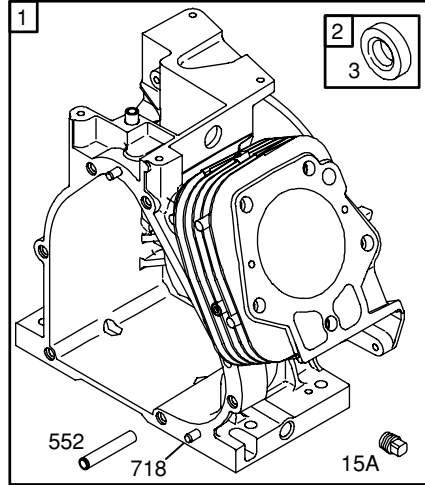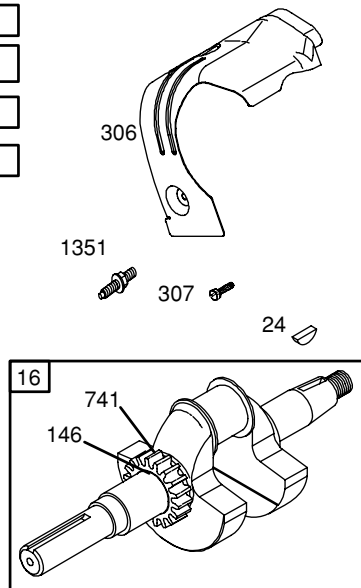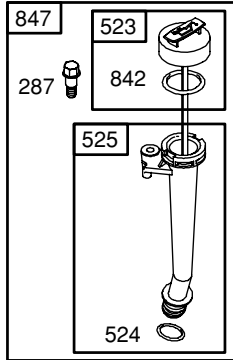

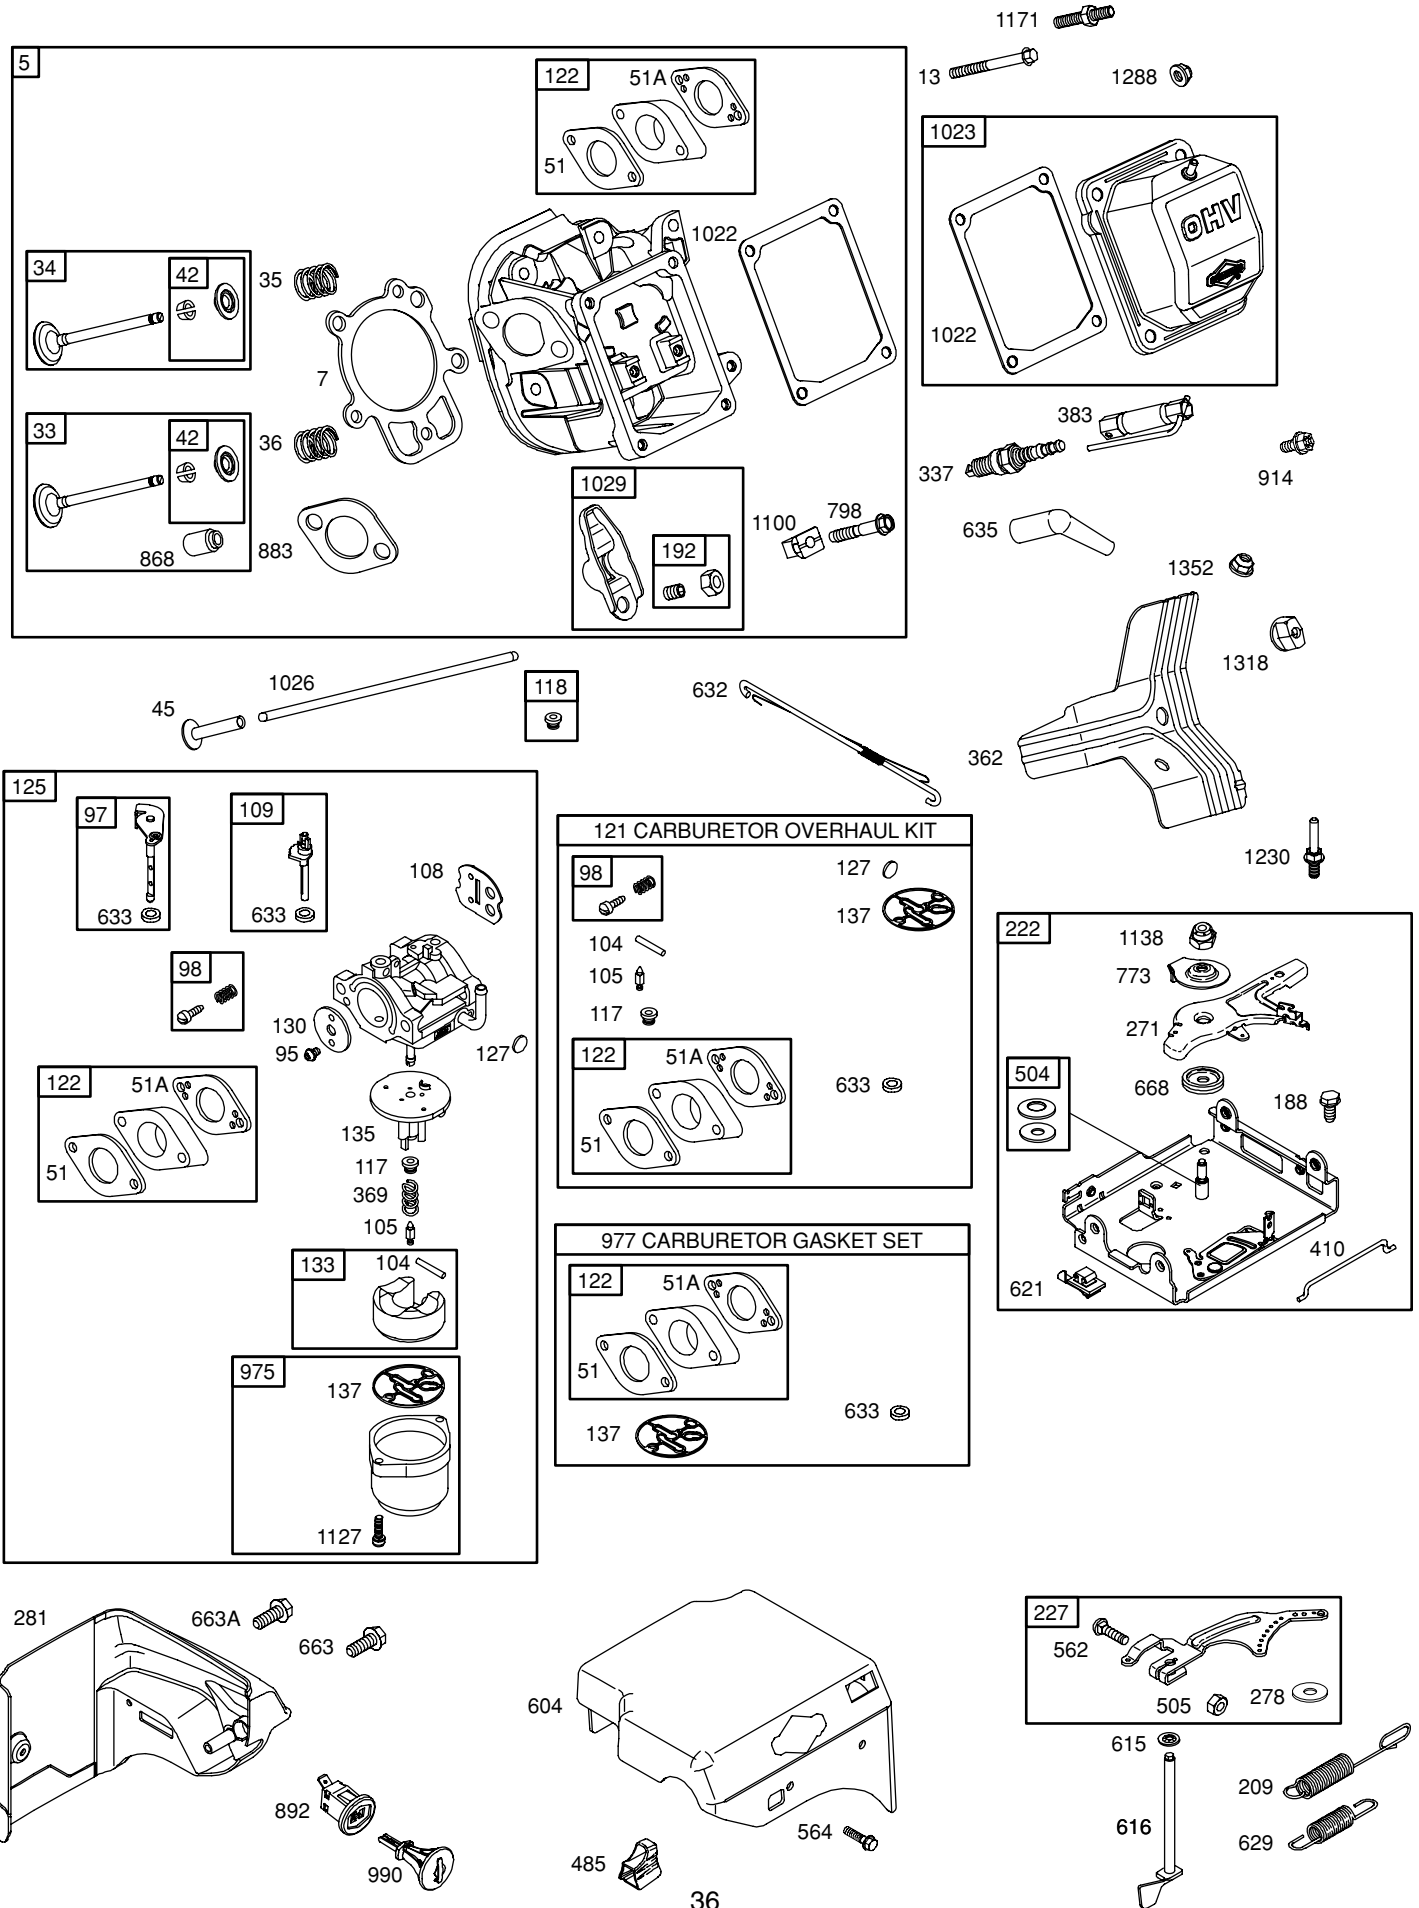

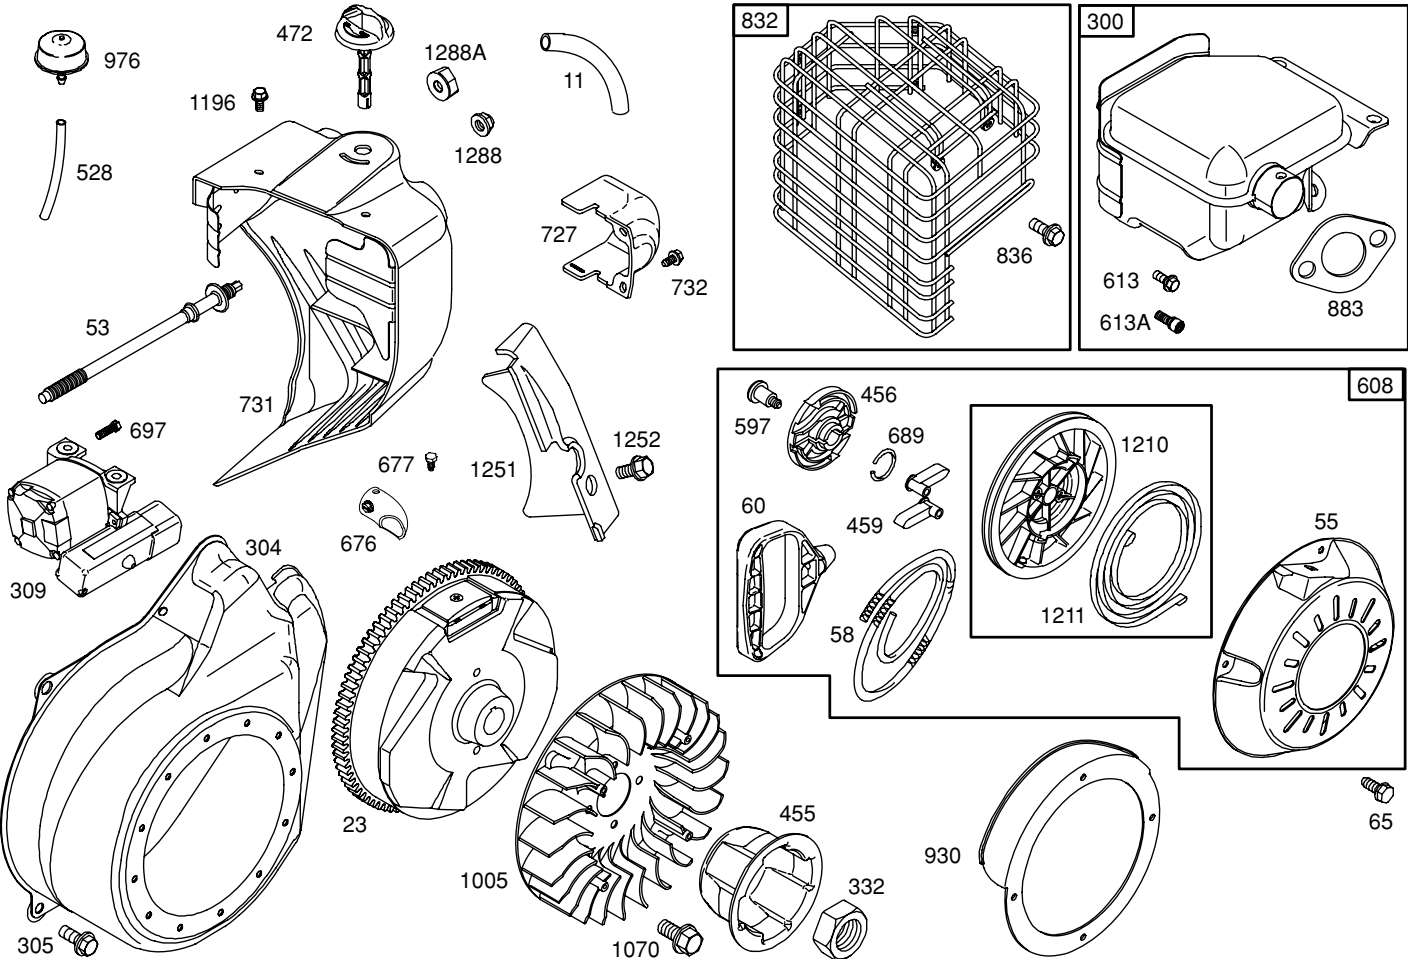

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	790030	Cylinder Assembly	117	696134	Ø Jet-Main (Standard)
2	698340	Kit-Bushing/Seal (Magneto Side)	118	696135	Ø Jet-Main (High Altitude)
3	391086	• Seal-Oil (Magneto Side)	121	696146	Kit-Carburetor Overhaul
5	793305	Head-Cylinder	122	694876	+Ø‡ Spacer-Carburetor
7	697690	•+ Gasket-Cylinder Head	125	696737	Carburetor
11	696750	Tube-Breather	127	690727	Ø Plug-Welch
12	694953	• Gasket-Crankcase	130	696139	Valve-Throttle
13	690360	Screw (Cylinder Head)	133	694914	Float-Carburetor
15	695757	Plug-Oil Drain	135	696142	Tube-Fuel Transfer
15A	691686	Plug-Oil Drain	137	695426	Ø‡ Gasket-Float Bowl
16	696412	Crankshaft	146	690979	Key-Timing
18	791965	Cover-Crankcase	187	791766	Line-Fuel (Cut to Required Length)
19	698340	Kit-Bushing/Seal (PTO Side)	187A	695429	Line-Fuel
20	391086	• Seal-Oil (PTO Side)	188	690877	Screw (Control Bracket)
21	281658	Cap-Oil Fill	190	692127	Screw (Fuel Tank)
22	695174	Screw (Crankcase Cover/Sump)	192	690083	Adjuster-Rocker Arm
23	695485	Flywheel	209	694867	Spring-Governor
24	222698	Key-Flywheel	219	693578	Gear-Governor
25	791817	Piston Assembly (Standard)	220	691724	Washer (Governor Gear)
	791818	Piston Assembly (.020" Oversize)	222	698034	Bracket-Control
26	697692	Ring Set (Standard)	227	694864	Lever-Governor Control
	697698	Ring Set (.020" Oversize)	271	698035	Lever-Control
27	690975	Lock-Piston Pin	278	792008	Washer (Governor Control Lever)
28	696581	Pin-Piston	281	697400	Panel-Control
29	694691	Rod-Connecting	287	691693	Screw (Dipstick Tube)
30	694692	Dipper-Connecting Rod	300	699222	Muffler
32	690976	Screw (Connecting Rod)	304	791479	Housing-Blower
33	499596	Valve-Exhaust	305	691108	Screw (Blower Housing)
34	792200	Valve-Intake	306	697240	Shield-Cylinder
35	694865	Spring-Valve (Intake)	307	691669	Screw (Cylinder Shield)
36	694865	Spring-Valve (Exhaust)	309	698112	Motor-Starter
42	499586	Keeper-Valve	332	694685	Nut (Flywheel)
45	690977	Tappet-Valve	333	492341	Armature-Magneto
46	790958	Camshaft	334	691061	Screw (Magneto Armature)
48	n/a	Short Block	337	491055	Plug-Spark
51	694874	•+Ø‡ Gasket-Intake	356	793206	Wire-Stop
51A	694875	•+Ø‡ Gasket-Intake	358	695438	Gasket Set-Engine
53	696753	Stud (Carburetor)	362	698041	Shield-Spark Plug
55	696710	Housing-Rewind Starter	369	695422	Spring-Float Bowl
58	693389	Rope-Starter (Cut to Length)	383	19374	Wrench-Spark Plug
60	695740	Grip-Starter Rope	410	695382	Link-Control
65	697725	Screw (Rewind Starter)	455	697226	Cup-Flywheel
95	690718	Screw (Throttle Valve)	456	692299	Plate-Pawl Friction
97	696387	Shaft-Throttle	459	281505	Pawl-Ratchet
98	695408	Ø Kit-Idle Speed	472	696752	Knob-Choke Shaft
104	694918	Ø Pin-Float Hinge	474	791743	Alternator
105	696136	Ø Valve-Float Needle	485	695755	Knob-Control
108	696736	Valve-Choke	504	695383	Washer Set-Friction
109	696735	Shaft-Choke	505	691251	Nut (Governor Control Lever)

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
523	695344	Dipstick	914	673732	Screw (Rocker Cover)
524	691876	Seal-O Ring (Dipstick Tube)	930	696709	Guard-Rewind
525	695343	Tube-Dipstick	957	698109	Cap-Fuel
528	696751	Hose-Primer	958	698180	Valve-Fuel Shut Off
529	791882	Grommet	972	694260	Tank-Fuel
552	694674	Bushing-Governor Crank	975	696138	Bowl-Float
562	691119	Bolt (Governor Control Lever)	976	790221	Primer-Carburetor
564	696692	Screw (Control Panel)	977	696147	Gasket Set-Carburetor
592	690800	Nut (Rewind Starter)	990	695756	Key Set
597	691696	Screw (Pawl Friction Plate)	998	792928	Pipe-Oil
601	791850	Clamp-Hose	1005	694684	Fan-Flywheel
604	696758	Cover-Control	1022	690971	•+ Gasket-Rocker Cover
608	699335	Starter-Rewind	1023	698042	Cover-Rocker
613	695312	Screw (Muffler)	1026	695177	Rod-Push
613A	696705	Screw (Muffler)	1029	690972	Arm-Rocker
615	694676	Retainer-Governor Shaft	1036	- - -	Label-Emissions
616	694675	Crank-Governor	1058	275964	Operator's Manual
621	692310	Switch-Stop	1070	791680	Screw (Flywheel Fan)
629	695307	Spring-Throttle Return	1095	695440	Gasket Set-Valve
632	695917	Spring/Link-Mechanical Governor	1100	791959	Pivot-Rocker Arm
633	690998	Ø‡ Seal-Choke/Throttle Shaft	1119	691183	Screw (Alternator)
635	691909	Boot-Spark Plug	1127	695407	Screw (Float Bowl)
663	696685	Screw (Control Panel)	1138	694255	Nut (Control Bracket)
663A	696704	Screw (Control Panel)	1171	696754	Stud (Rocker Arm Cover)
668	694257	Spacer(Control Bracket)	1196	696692	Screw (Snow Hood)
676	697816	Deflector, Muffler	1210	498144	Pulley/Spring Assembly (Pulley)
677	691660	Screw (Muffler Deflector)	1211	498144	Pulley/Spring Assembly (Spring)
689	691855	Spring-Friction	1230	696747	Stud (Control Bracket)
697	698113	Screw (Starter Motor)	1251	696762	Shield-Snow
718	690959	Pin-Locating	1252	691108	Screw (Snow Shield)
718A	695178	Pin-Locating	1288	696757	Nut (Snow Hood)
725	696756	Shield-Heat	1318	698111	Knob-Snow Hood
727	697465	Cover-Starter Drive	1329	21B414-0017	Replacement Engine (Transfer Alternator from original engine)
731	790222	Hood-Snow	1330	272147	Repair Manual
732	691097	Screw (Starter Drive Cover)	1351	790017	Stud (Cylinder Shield)
741	691288	Gear-Timing	1352	790026	Nut (Spark Plug Shield)
742	692564	Retainer-E Ring			
746	694679	Gear-Idler			
773	694258	Retainer			
798	697890	Screw (Rocker Cover)			
832	699223	Guard-Muffler			
836	691003	Screw (Muffler Guard)			
842	691031	Seal-O Ring (Dipstick)			
847	695342	Dipstick/Tube Assembly			
851	692424	Terminal, Spark Plug			
868	690968	•+ Seal-Valve			
883	695398	•+ Gasket-Exhaust			
892	791944	Switch-Key			

• Included in Engine Gasket Set, Key Number 358

Ø Included in Carburetor Overhaul Kit, Key Number 121

‡ Included in Carburetor Gasket Set, Key Number 977

+ Included in Valve Gasket Set, Key Number 1095

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

Get it fixed, at your home or ours!

Just Call:

1-800-4-MY-HOME[®]

(1-800-469-4663)

24 hours a day, 7 days a week

For the repair of major brand appliances **in your own home...**
no matter who made it, no matter who sold it!

For your nearest **Sears Parts and Service** location,
to bring in products like vacuums, lawn equipment and electronics.

For **Sears Parts & Service**, to order the replacement parts,
accessories and owner's manuals that you need to do-it-yourself.

www.sears.ca

To purchase or inquire about a Sears Maintenance Agreement, call:

1-800-361-6665

9 a.m. – 11 p.m. Mon. – Fri., EST, 9 a.m. – 4 p.m. Sat.

Pour service en français:

1-800-LE-FOYER^{MC}

(1-800-533-6937)

www.sears.ca



02488

[®] / TM Trademarks of Sears, Roebuck and Co. used under license by Sears Canada

^{MD} Marque déposée / ^{MC} Marque de commerce de Sears, Roebuck and Co. utilisée en vertu d'une licence de Sears Canada